 

 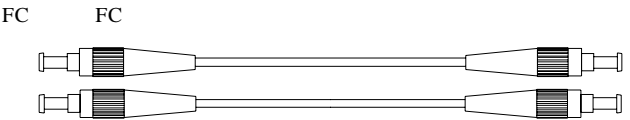



LC SC SC

ST ST key

5.2.3

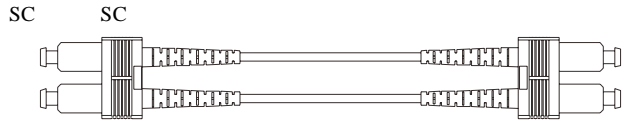


LED


P1~P2		
ALM		
RUN		

7.1

7.2

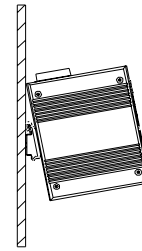


7.3

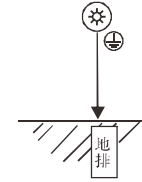

7.4


8

N V-
V+ V-

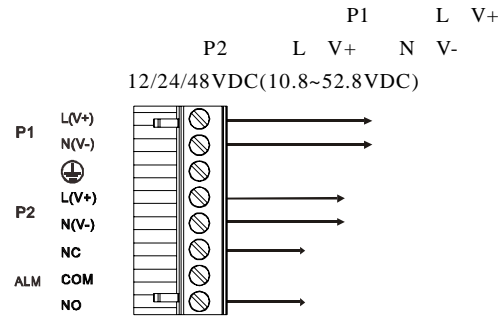


7.5

NC-COM

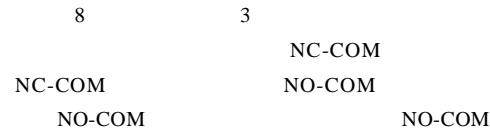


7.6

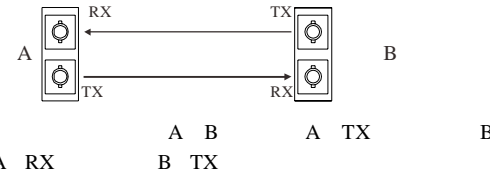

7.7

default 5

 1 Console 115200 8-N-1
PIN3—TXD PIN4/5—GND PIN6-RXD
2 Web IP 192.168.1.254
admin
admin



	1PCS
	1PCS
	1PCS
	1PCS

	1000 Base-X	10/100/1000 Base-T	100Base-FX/1000Base-X
UT-62012GC-8GT4GP-RNF	4	8	SFP
UT-62012GC-8GT4GSC-RNF	4	8	SC

1 SC /SFP
2 ST/FC
" RNF" " F" 12/24/48VDC
(10.8~52.8VDC)
3

Web CLI
<http://download.lvroyal.com/>

