



UT-FT231XS/USB/TTL

UT-FT231XS USB TTL USB TTL

UT-FT231XS

300bps-3Mbps

USB TTL

TTL 1.8V 2.5V 3.3V 5V

RTS CTS

1		U2.0				TTL				
2	USB	VCC	DATA-	DATA+	GND	FG				
3	TTL	:VCC	VIO	TXD	RXD	GND	CTS	RTS		
4										
5	TTL		1.8V/2.5V/3.3V/5V							
6										
7			300bps-3Mbps							
8							1	TTL		
9		USB	5	USB		5				
10					PWR		TXD		RXD	
11										
12							UART		PLC	
13			40mA							
14		-40	85				5%		95%	
15										Win2000/2003/2008/2012/XP/Vista/7/8/8.1/10/11/CE/Mac/Linux

 
TTL

5PIN		TTL
1	VCC	5V
2	VIO	IO
3	TXD	
4	RXD	
5	GND	



USB TTL

1 TTL

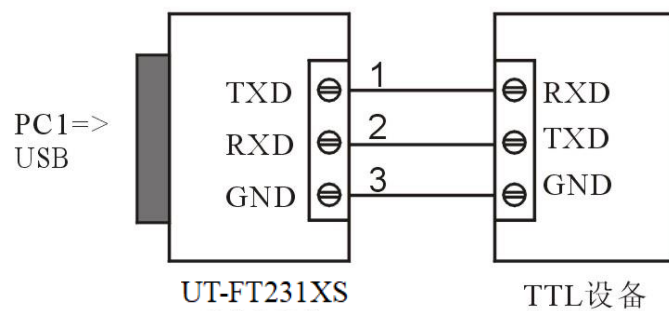

1

A USB

B TTL

C

D

E

F

2

 
A

九、安装驱动程序步骤


)] , [(





[[] []]

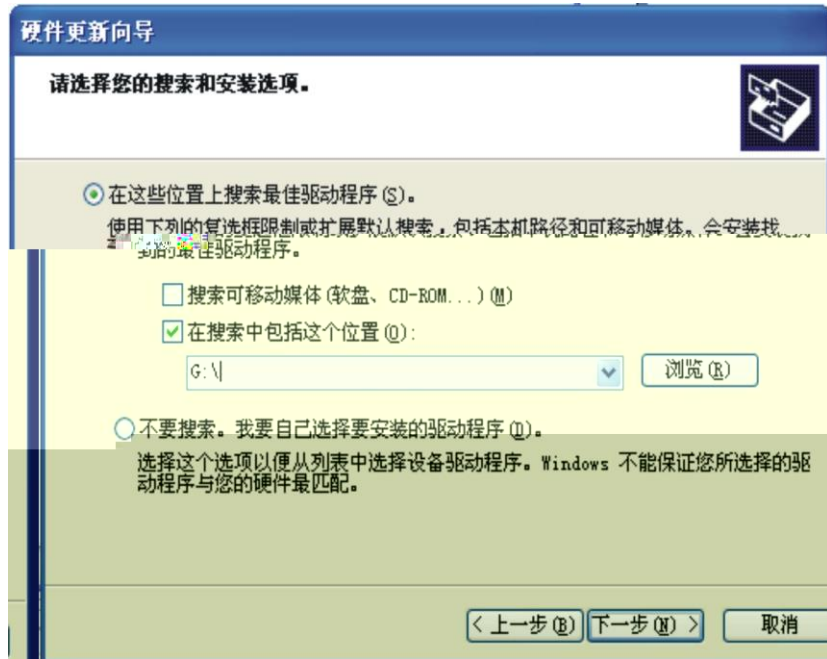

[] software

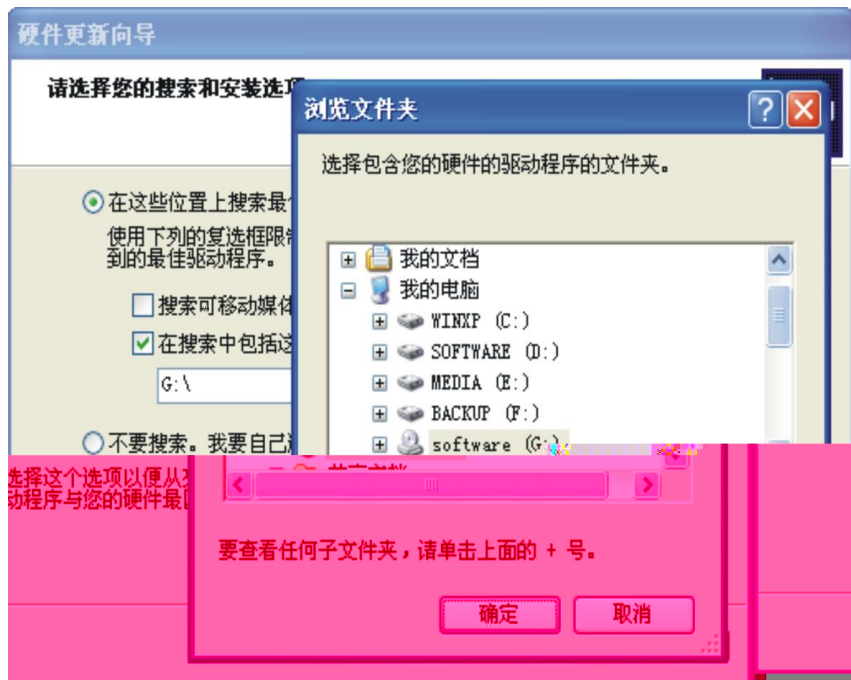 

  windows xp [USB2.0 Driver win2000 xp64 server2003
2008x64 Vista x64 win7 x64]

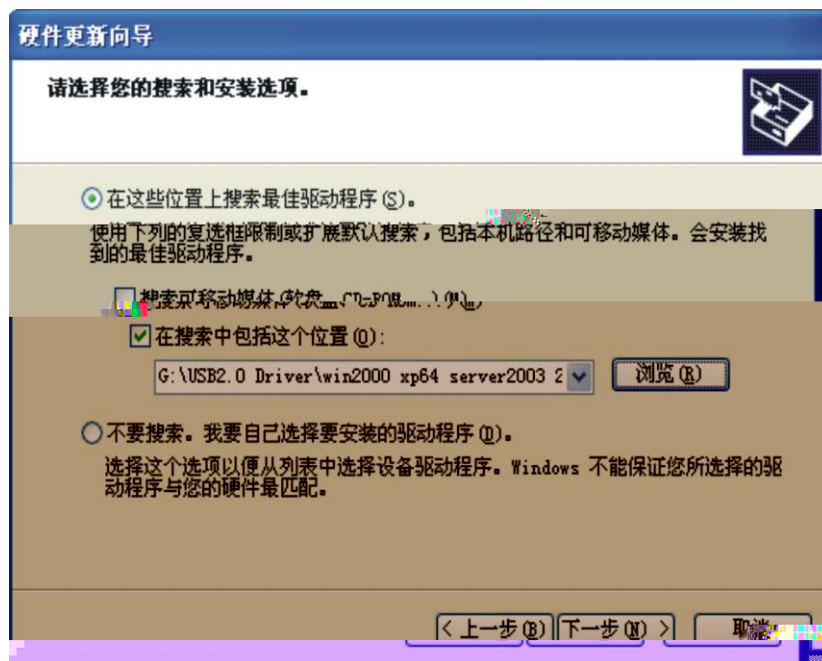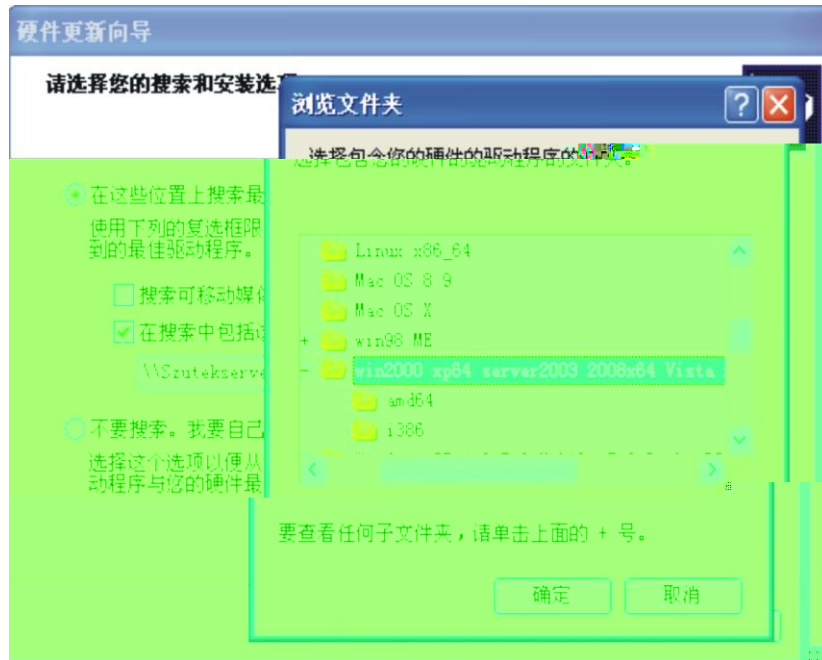




USB Serial Port

USB Serial Converter

 
[

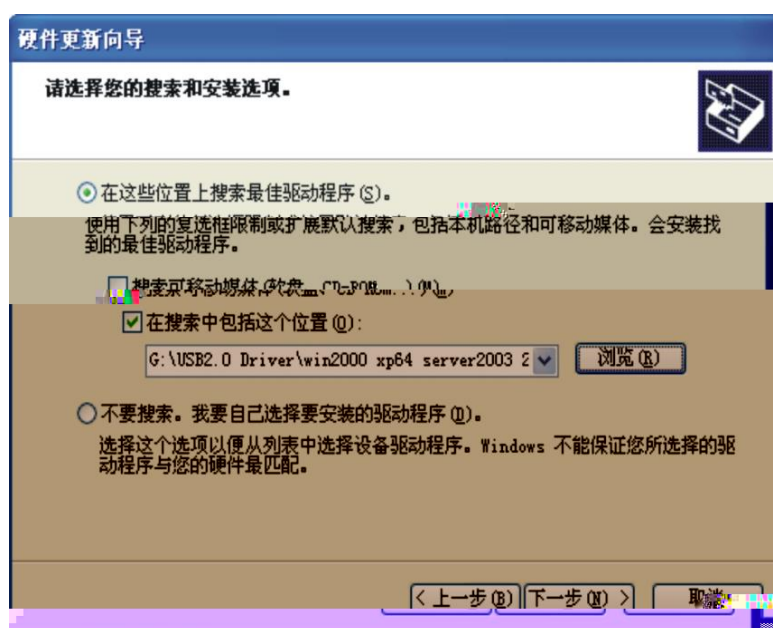

USB Serial Port



 USB Serial Port

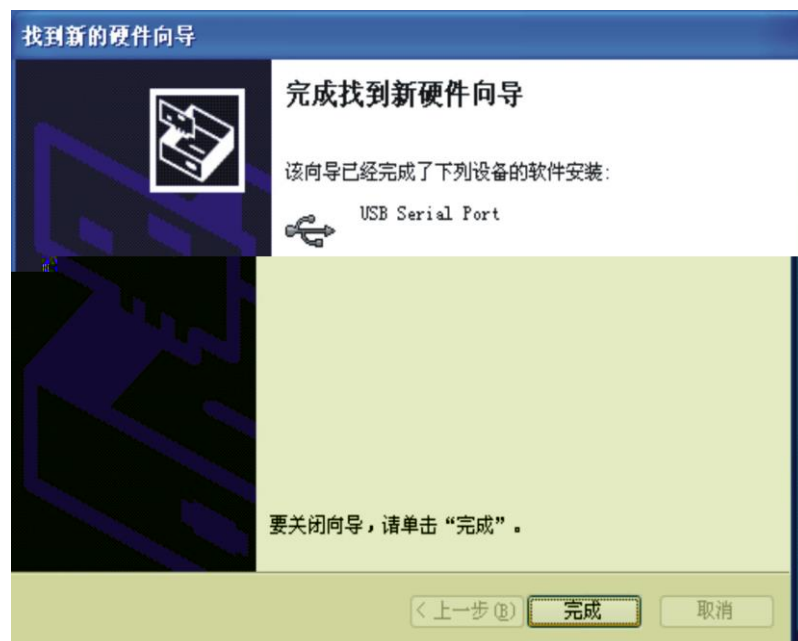

USB

COM

COM3

COM

