

Model:UT-890A-I  
USB RS-485/422



.....	3
.....	3
.....	4
.....	4
.....	5
.....	6
.....	7
.....	7
.....	8-13

PC	USB	PC
		RS-485/RS-422
	USB	RS-485/RS-422
422		PC
		RS-485/RS-
UT-890A-I	USB/RS-485/422	
USB RS-422 RS-485		USB
S-422 RS-485	600W	
		RS-422/RS-485
RS-422 RS-485	DB9	
,	I/O	( RTS D
TR )		(RS-422) (RS-485)
UT-890A-I	USB/RS-485/422	
		32 RS-422 RS-485
	300bps-921.6Kbps	
	USB	RS-422 USB RS-485
UT-890A-I	USB/RS-485/422	
1 /		
2 /		
3 /		
4 /		
	120	1/4W

UT-890A-I

USB/RS-485/422

USB

USB/DB-9

/

RS-485

RS-422

T/R+/T/R-

A+/ -

RXD+/RXD-

+/- GND

T/R+ T/R-

T/R+ T/R- RXD+ RXD-

1 USBV1.0 1.1 2.0 EIA RS-485 RS-422

2 USB VCC DATA+ DATA- GND FG

3 RS-485 T/R+ T/R- GND

4 RS-422 T/R+ T/R- RXD+ RXD- GND

5 2 4

6

7 300bps-921.6Kbps

8 32 RS-422 RS-485

9 RS-485/422 1200 (9600bps ) USB 5

10 ± 1KV ± 15KV EFT500V

11 USB RS-485/422 2500VRMS 500VDC

12 USB A DB9

13 2 TXD RXD 1

POWER

14

15 1500mm\*36mm\*16mm \* \*

16 -40 85 5% 95%


17 0-1200

18 Win/98/Win2000/WinXP/Vista/Win7/8/10/11/Linux

DB9 RS-485/RS-422


DB9 (PIN)		RS-422	RS-485
1	T/R+	(A+)	RS-485(A+)
2	T/R-	(B-)	RS-485(B-)
3	RXD+	(A+)	
4	RXD-	(B-)	
5	SGND		
6	N/A		
7	N/A		
8	N/A		
9	N/A		

 DB9

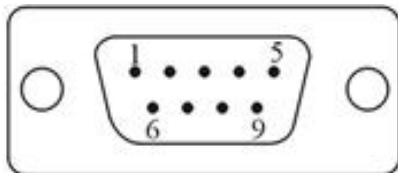


USB-A USB


USB-A(PIN)		
1	VCC	USB
2	DATA+	
3	DATA-	
4	GND	USB

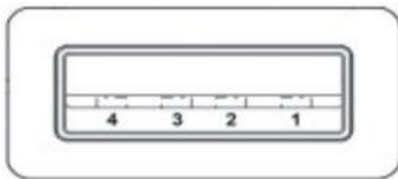 

 
1. USB至RS-422转换

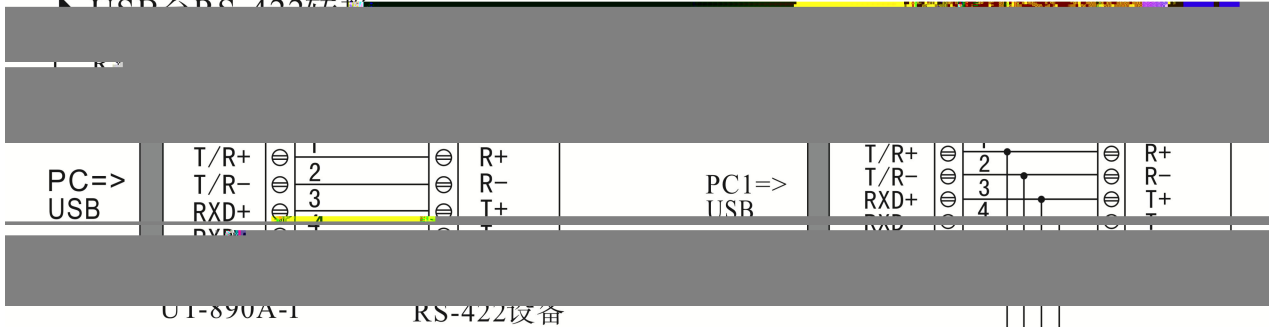

 
2. UT-890A-I接口转换器之间全双工通信连接

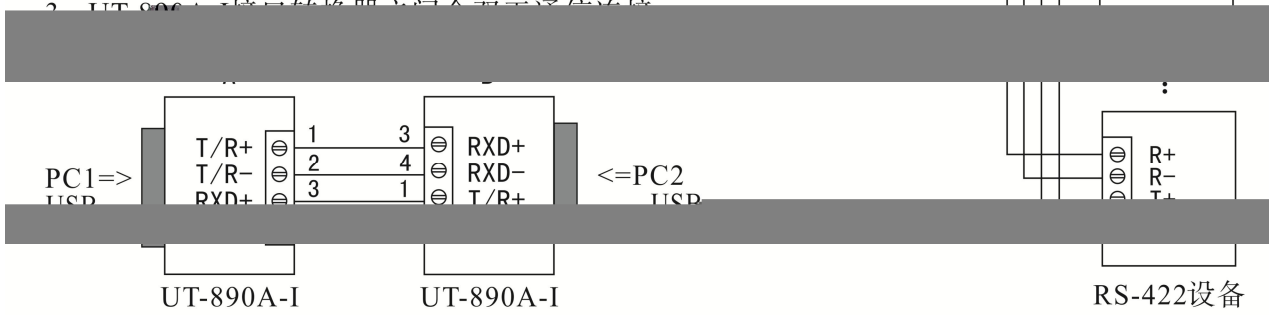

 1. USB至RS-485转换

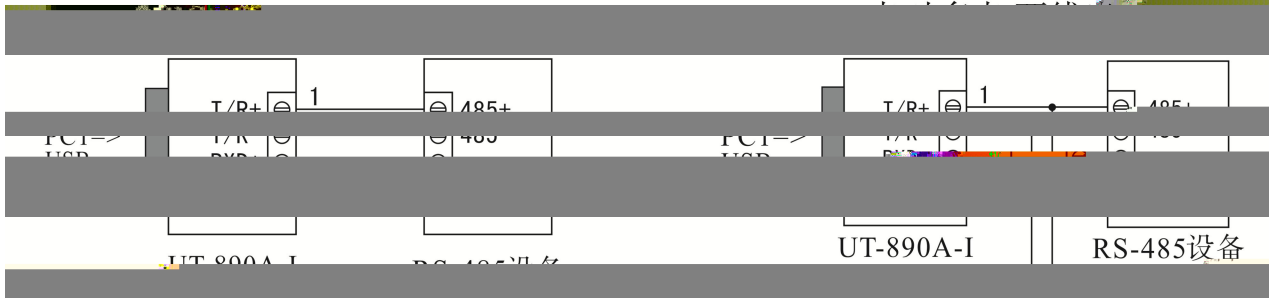

 2. UT-890A-I接口转换器之间半双工通信连接

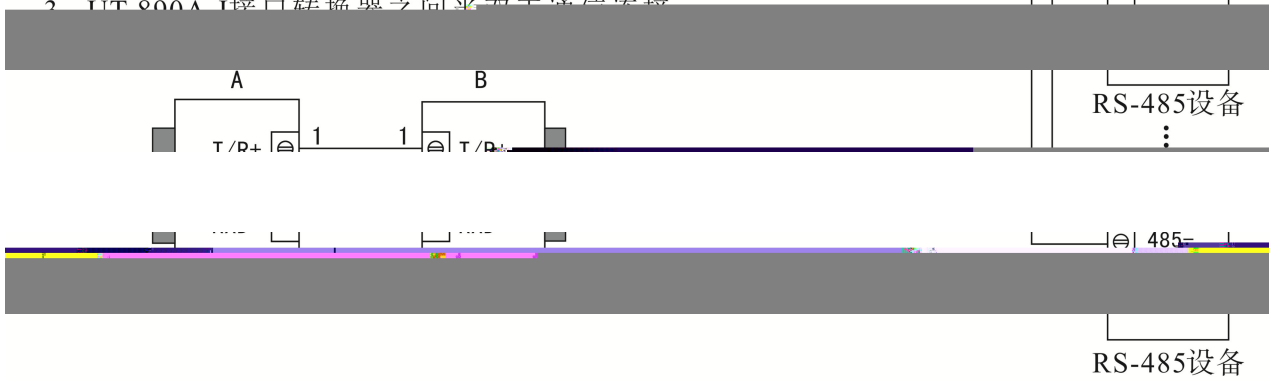

1

A USB

B RS-485/RS-422

C

D

E

F

 
2

A

UT-890A-I

XP

[ ( ) ]

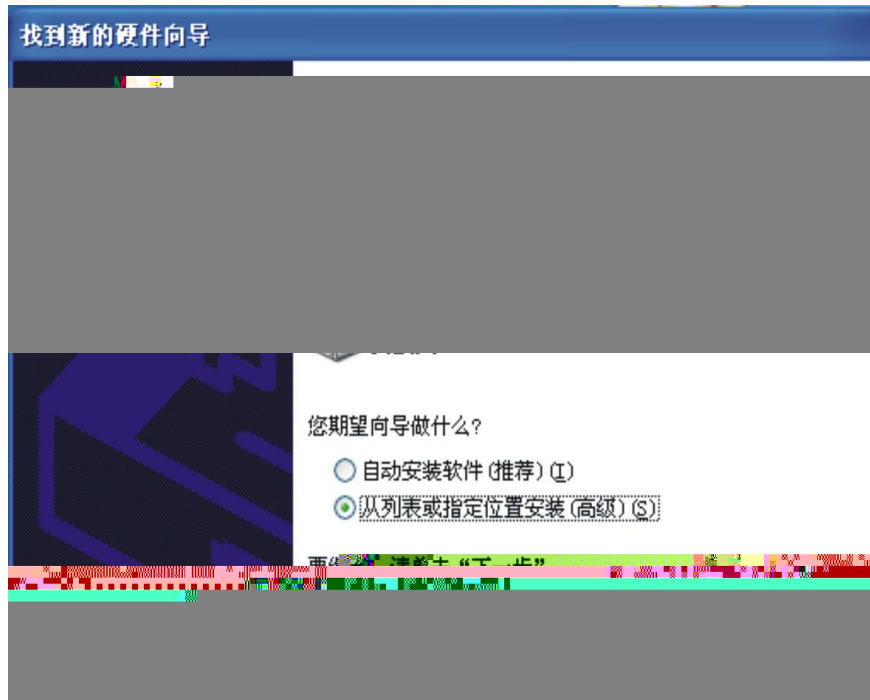

[ ] [ ]

 
] [ ]





[ ]

software

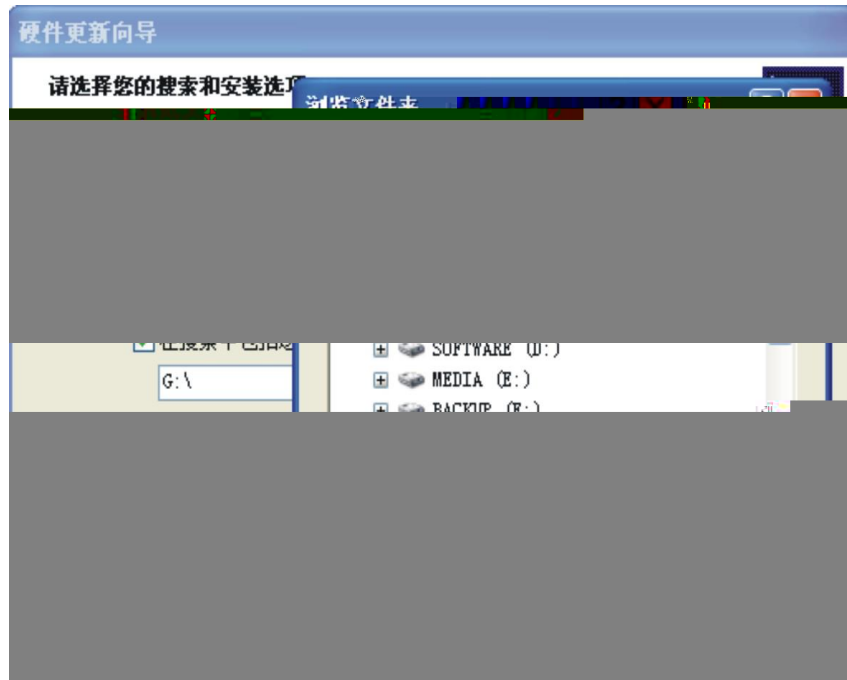




windows xp

[USB2.0 Driver

win2000 xp64 server2003

   2008x64 Vista x64 win7 x64]

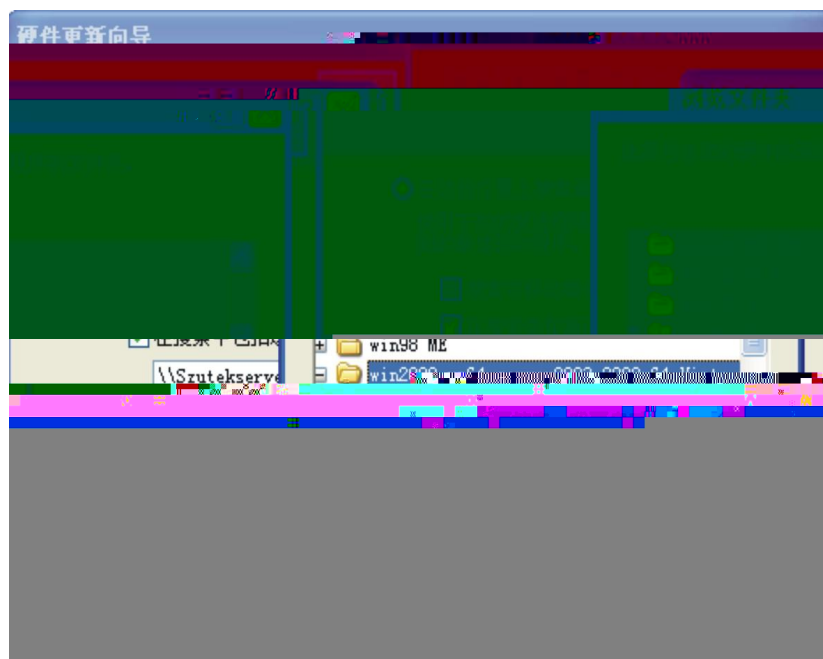

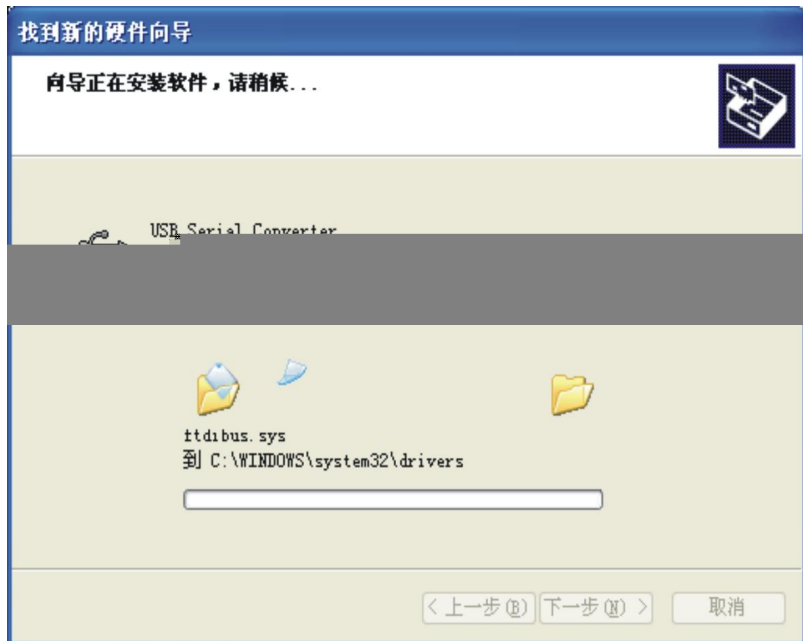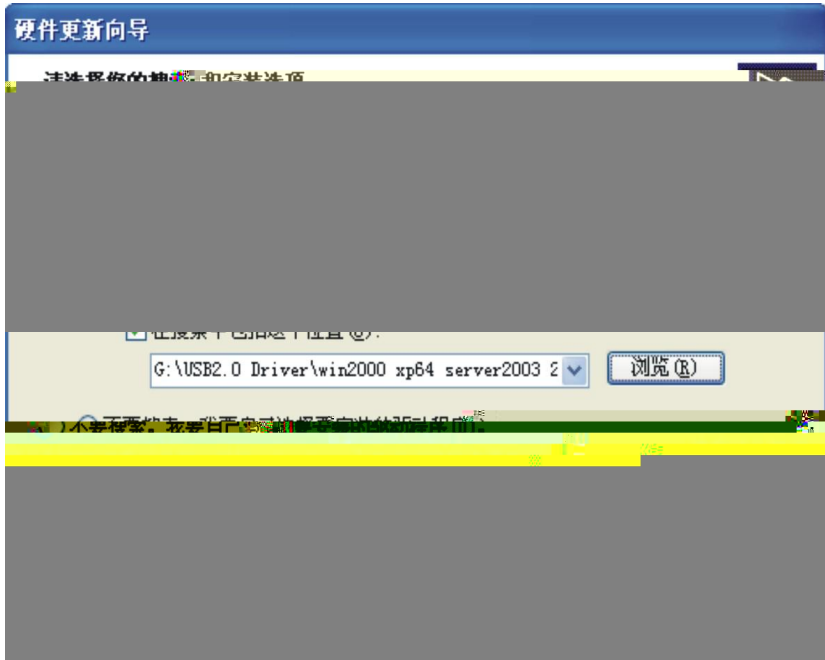




USB Serial Port


USB Serial Converter

 [



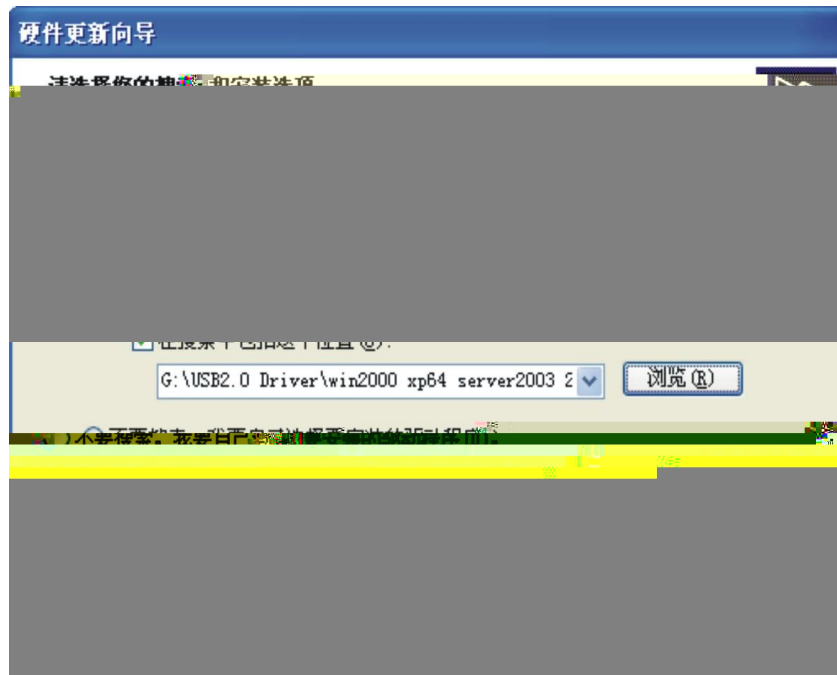

USB Serial Port

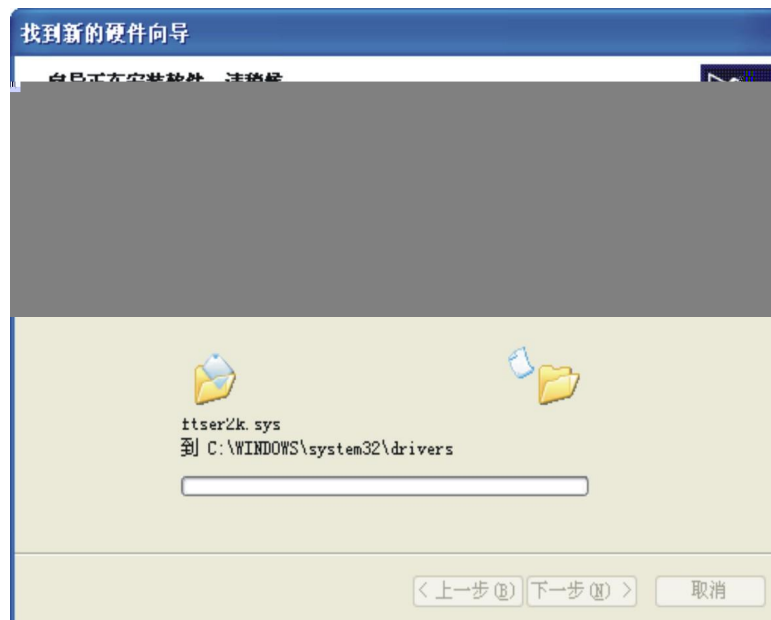 

USB Serial Port

UT-890A-I



COM  
USB                                  COM                  COM3                                  UT-890A-I

