

Model:UT-8232
USB/RS-232 1Port



~

.....3

.....3

.....3

.....3

.....4

.....4

.....5

~

.....6

~

.....6-12



	PC		USB		PC		
				RS-232			USB
RS-232		PC	RS-232				
	UT-8232		USB/RS-232			USB	RS-232
		USB	RS-232				
I/O							
	UT-8232				300-460800bps		USB
	RS-232						

1

	UT-8232				USB		USB
		USB/DB9M		/			RS-232
					9	DCD	RXD TXD
DTR	GND	DSR	RTS	CTS	RI		

1		USBV1.1	1.0	2.0	EIA	RS-232	
2	USB	VCC	DATA-	DATA+	GND	FG	
3	RS-232	DCD	RXD	TXD	DTR	GND	DSR RTS CTS RI
4							
5							
6		300-460800bps					
7							

 


8	RS-232	5	USB	5
9	± 15KV			
10	USB	A	DB9	
11				
12	1530mm× 34mm× 16mm			
13	-40	85	5%	95%
14	Windows95/98/2000/2008/xp/Vista/win7/8/8.1/10/11 MAC Linux			


1 RS-232C

DB9 M(PIN)	RS-232C
1	
2	SIN (RXD)
3	SOUT (TXD)
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI

DB9针型

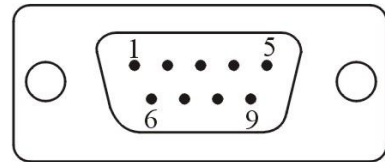

2 USB-A USB

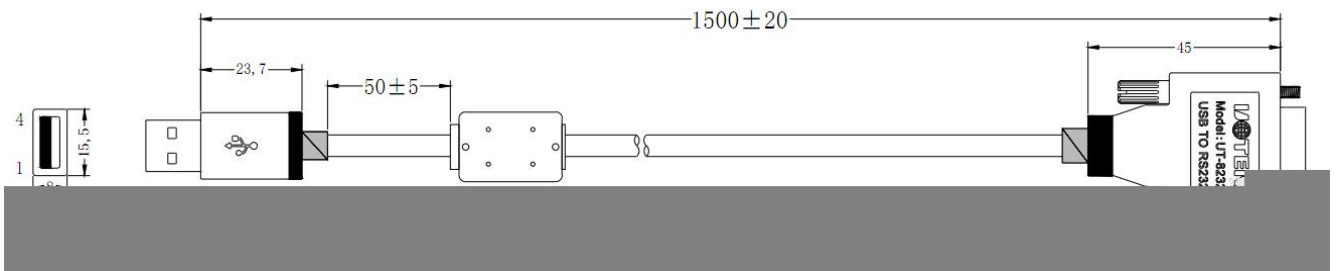 


USB A

USB2.0

DB9

FTDI

 1 DCD 2 RXD 3 TXD 4 DTR 5 GND 6 DSR 7 RTS 8 CTS 9 RI

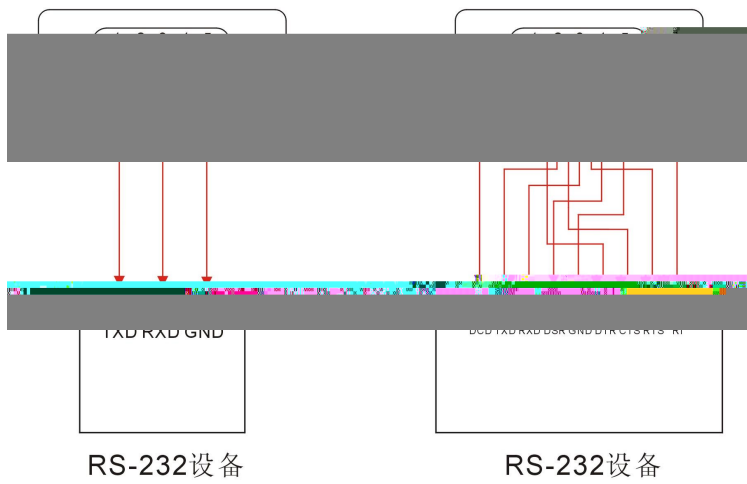

1

- A USB
- B RS-232
- C
- D

2

 
- A
- B




UT-8232

XP

[()]

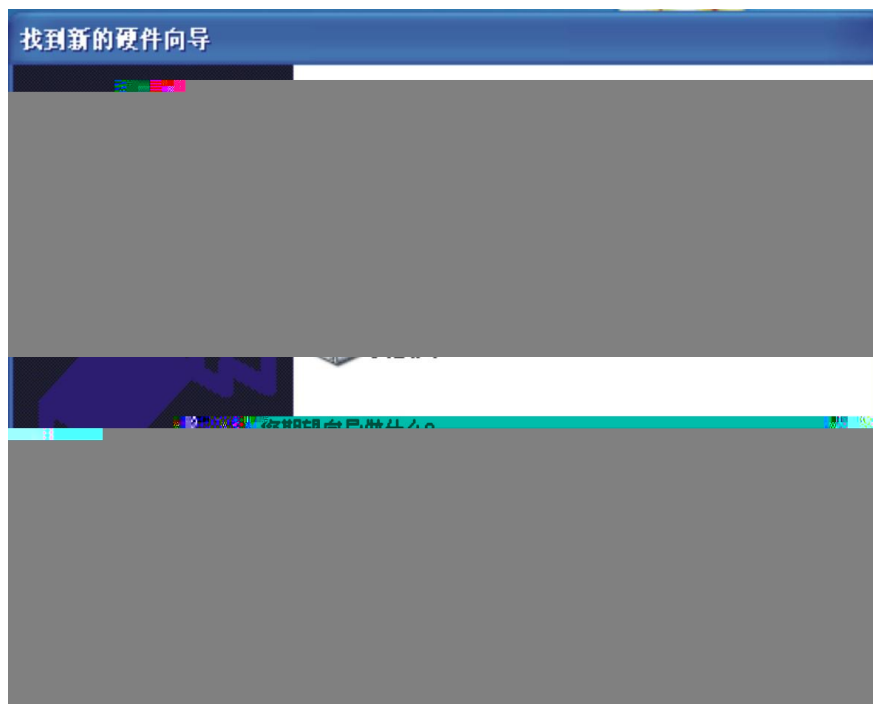


[[]]


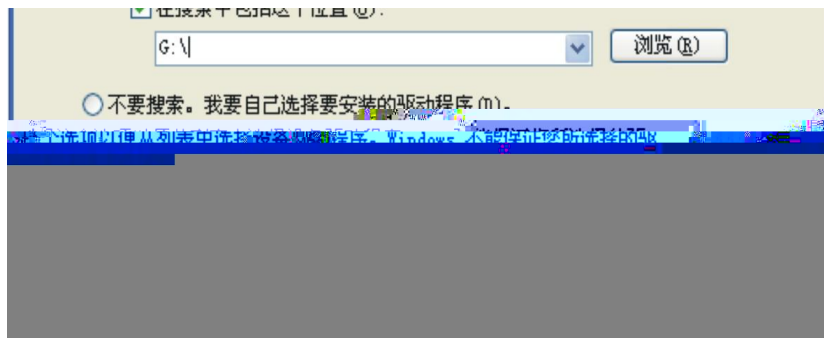 



[]

 software

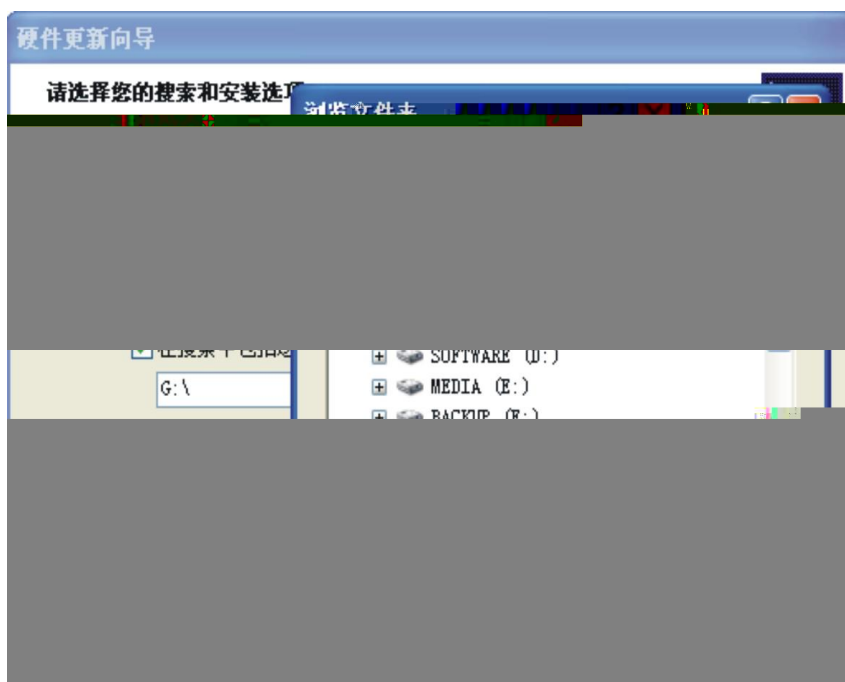

   windows xp [USB2.0 Driver win2000 xp64 server2003
2008x64 Vista x64 win7 x64]

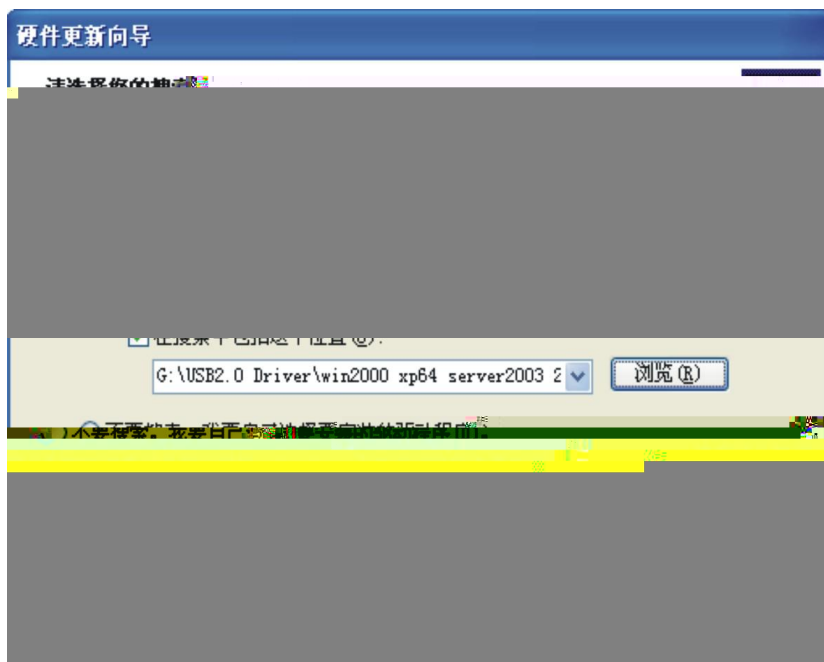
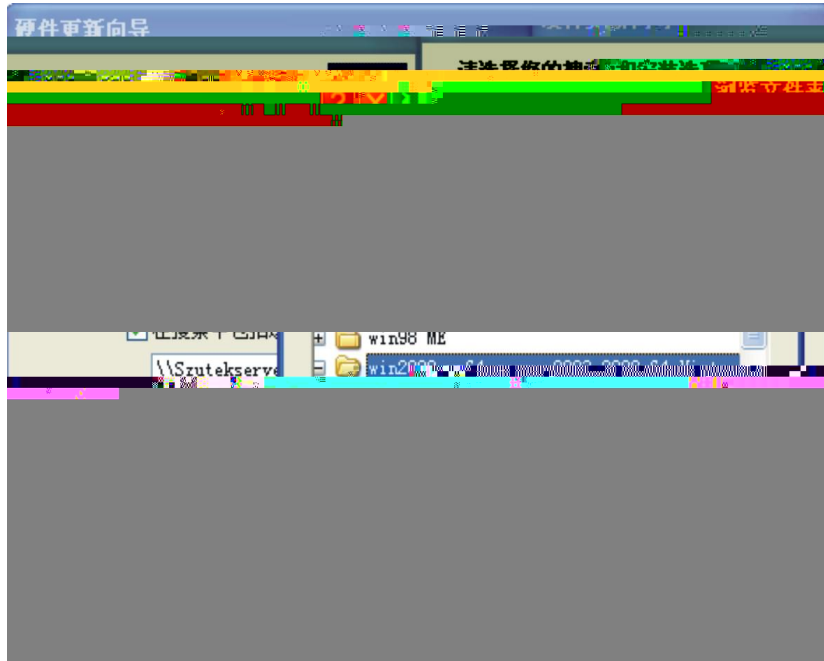


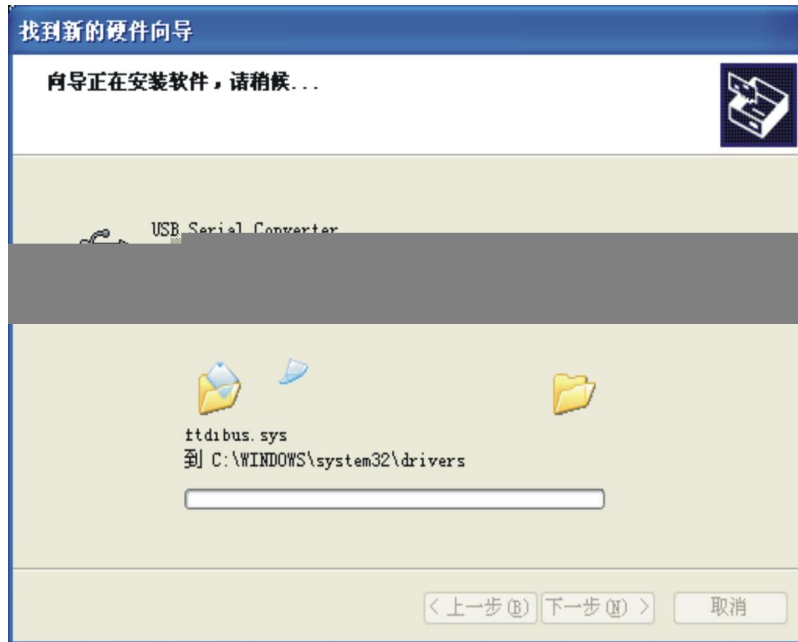


USB Serial Port

USB Serial Converter

  [

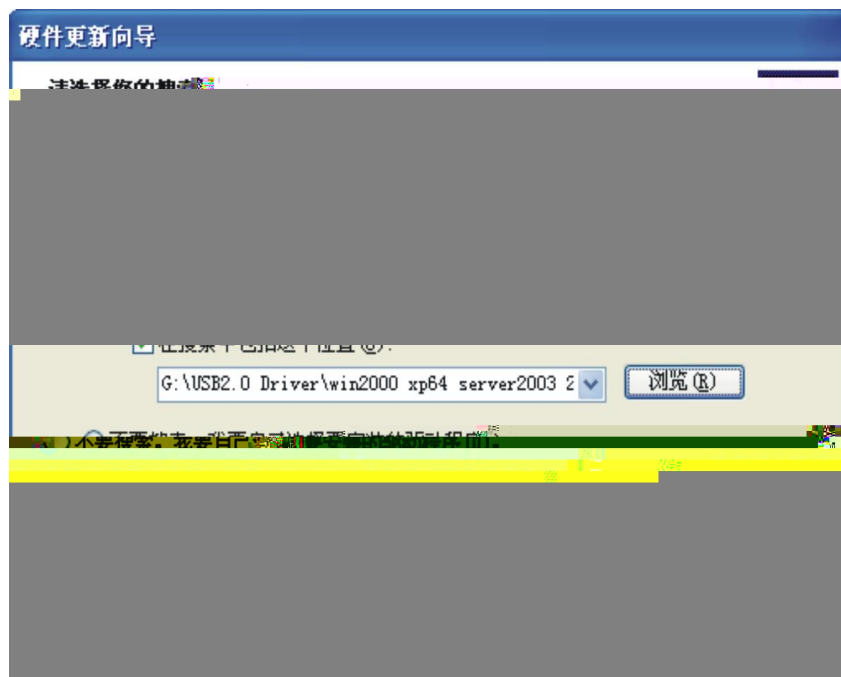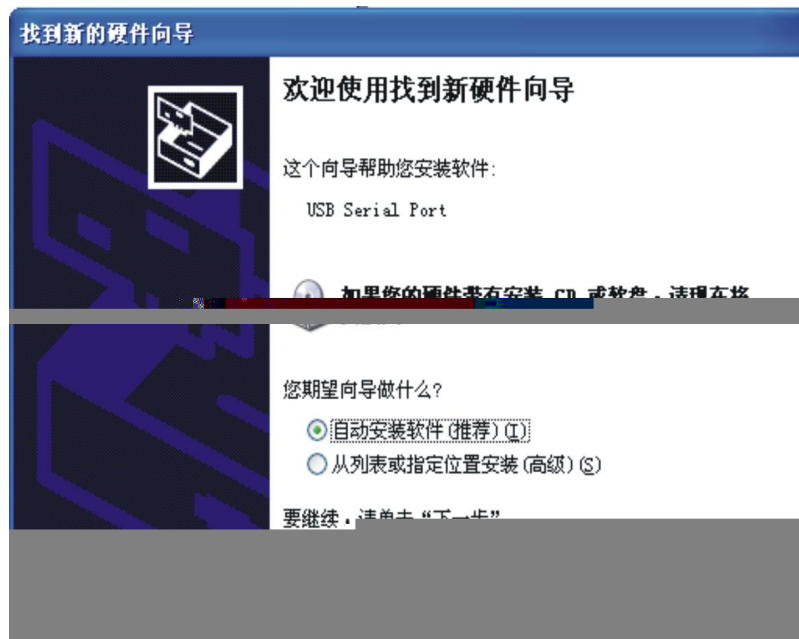

USB Serial Port

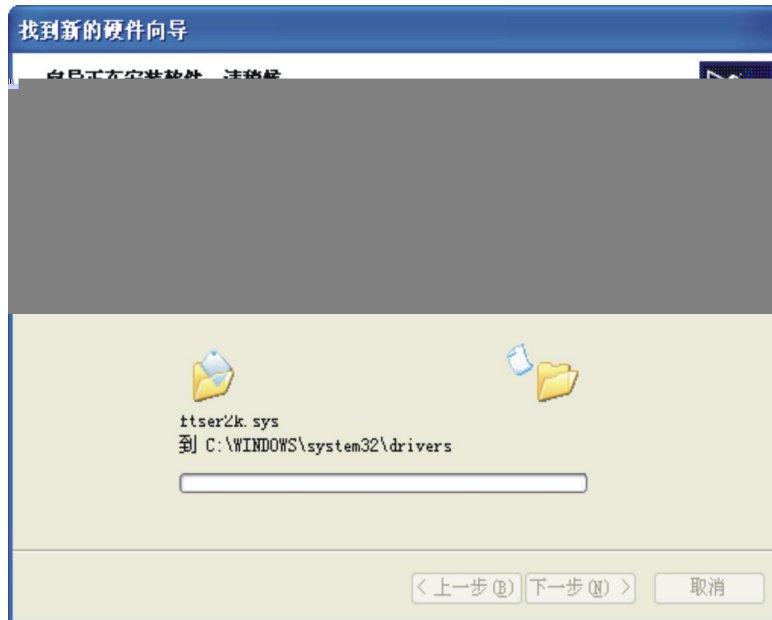 

USB Serial Port

UT-8232



