 




DB9针型：RS-485/RS-422输出信号引脚分配(Port1-Port8)

| DB9 针型 | 输出信号 | RS-422全双工接线 | RS-485半双工接线 |
|--------|------|-------------|-------------|
| 1      | T/R+ | 发(A+)       | RS-485 (B-) |
| 2      | T/R- | 发(B-)       | RS-485 (A+) |
| 3      | RXD+ | 收(A+)       | 空           |
| 4      | RXD- | 收(B-)       | 空           |
| 5      | GNND | 地线          | 地线          |
| 6      | N/C  |             |             |
| 7      | N/C  |             |             |
| 8      | N/C  |             |             |
| 9      | N/C  |             |             |

转接线出口



DB9针型





