

UT-8851

USB TTL

-
-
-



-
-

 
-

-
-
-
-
-
-
-
-
-
-
-
-
-
-
-
-
-
-
-
-
-
-


TTL输出信号及接线端子引脚分配：

接线端子	输出信号	功能
1	TXD	发送
2	RXD	接收
3	NC	空脚

USB-A类：USB信号输入及引脚分配图

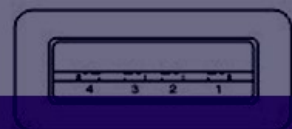


1、VCC 3、DATA+(DP)
2、DATA-(DM) 4、GND

 

后视图

 
单位: $\frac{\text{mm} \pm 0.5}{(\text{inch}) \pm 0.02}$

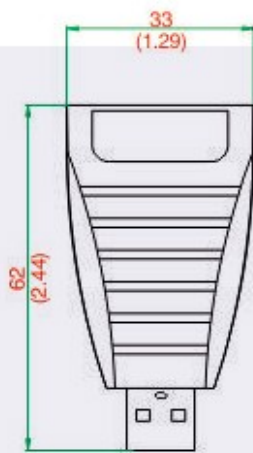

俯视图



 右侧视图

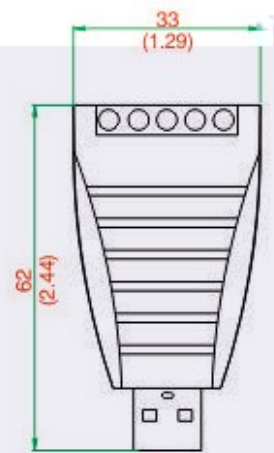

底视图



前视图



