











UT UT-55XX\_V1.1.1

UT_55XX I/0控制软件	
连接     连接       串口号: COMI ▼ 协议: UTBUS ▼ 打开     打开	— 中英切换
· 识别 设备地址: 波特率: 硬件类型: 硬件版本: 软件版本:	—— 设备的设置和识别
□ 设置 设备地址: 0x01 ▼ 修改 波特案: 1200 ▼ 修改	
「I/O輸入 读取 □ 连续读取 1000 Imms/次 VINO VIN1 VIN2 VIN3 VIN4 VIN5 VIN6 VIN7	—— 1/0输入
1/0編正         全开       「 连续輸出 2000 III ms/次         VOUTO       VOUT1         VOUT0       VOUT1         01       01         01       01         01       01         01       01	—— 1/0输出
清空         夏           显示	━━ 指令收发区
□版本号: ¥1.1.1	<b>」 版</b> 査 ほっ





	#0	<u>∗</u> ⊓Г		
PC	中山 中山 USB485串口线		UT-5518	
		Ļ		



🛃 计算机管理	
文件(F) 操作(A) 查看(V) 素	1助 (4)
🗢 🏟 🖄 📅 🛅 📓 🖬	
<ul> <li>計算机管理(本地)</li> <li>○ 計系统工具</li> <li>● ① 任务计划程序</li> <li>● 圖 事件查看器</li> <li>● 2 共享文件夹</li> <li>● 2 本地用户和组</li> <li>● ◎ 性能</li> <li>● ◎ 性能</li> <li>● ◎ 音管理器</li> <li>□ ● 存储</li> </ul>	<ul> <li>□ 書 tang-PC</li> <li>□ DE ATA/ATAPI 控制器</li> <li>□ 处理器</li> <li>□ 磁盘驱动器</li> <li>□ 磁盘驱动器</li> <li>□ □ 端曰 (COM 和 LPT)</li> <li>□ □ USB Serial Port Redirector (COM2)</li> <li>□ USB Serial Port (COM36)</li> <li>□ USB Serial Port (COM37)</li> <li>□ USB Serial Port (COM38)</li> </ul>
■ 磁力 (1000) ■ ■ 10000000000000000000000000000000000	
	日 · · · · · · · · · · · · · · · · · · ·

ur_ur_55xx I/0控制软件			J×
串口号: COM1 ▼ 1 _ 协议: MODBUS ▼ 打开 2	语言:	中文 💌	1
设备地址: 波特率: 硬件类型: 硬件版本: 软件版本:		识别	] 4
设备地址: 0x01 ▼ 修改 波特率: 1200 ▼ 修改	3		

TX:00 A1 13 88 00 01 F8 AC	A	
RX:01 03 02 00 01 79 84		志
FX:00 A1 17 70 00 03 F9 AC		- 27
RX:01 03 06 55 12 00 01 00 02 45 72		<b>5</b> 품
设备识别成功!		475
		亦
	V	



UT-55XXI/O



TX:03 02 00 00 00 08 78 2E RX:03 02 01 01 61 F0 I/0输入读取成功! TX:03 02 00 00 00 08 78 2E RX:03 02 01 01 61 F0 I/0输入读取成功!







