

Model:UT-883
USB/RS-232



----- 3

----- 3

----- 3

----- 3

----- 4

----- 4

----- 5

----- 5-12

PC ,USB PC USB
 RS-232 RS-232
 UT-883 USB/RS-232 , USB RS-232
 USB RS-232 , I/O
 UT-883 300-115.2Kbps
 USB RS-232

 
UT-883 1

UT-883 USB
 USB USB/DB9M / ,
 RS-232 5 RXD TXD
 GND RTS CTS


- 1 USB V1.1 1.0 2.0
- 2 RS-232 DB9
- 3 +/-15KV ESD
- 4
- 5
- 6 RS-232 PDA
- 7 -40 85 5% 95%
- 8 Win8/Win10/Win2000/2003/2008/2012/XP/Vista/7/8/8.1/10/CE/Mac/Linux

1 RS-232C


DB9 M(PIN)	RS-232C
1	
2	SIN (RXD)
3	SOUT (TXD)
4	
5	GND
6	
7	RTS
8	CTS
9	

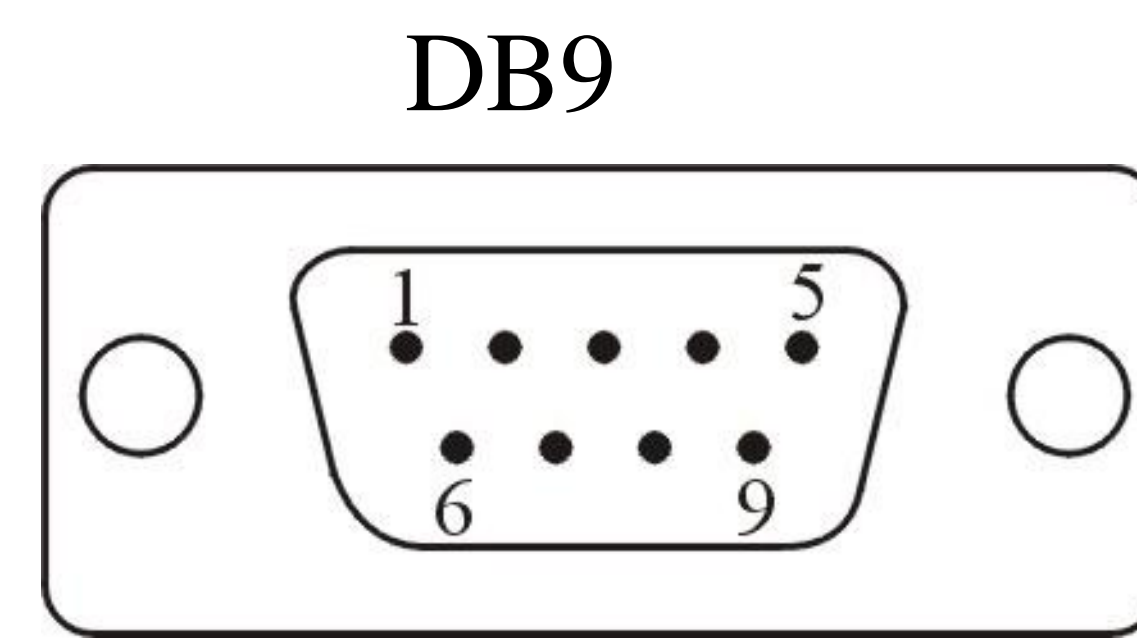

1 USB-A USB

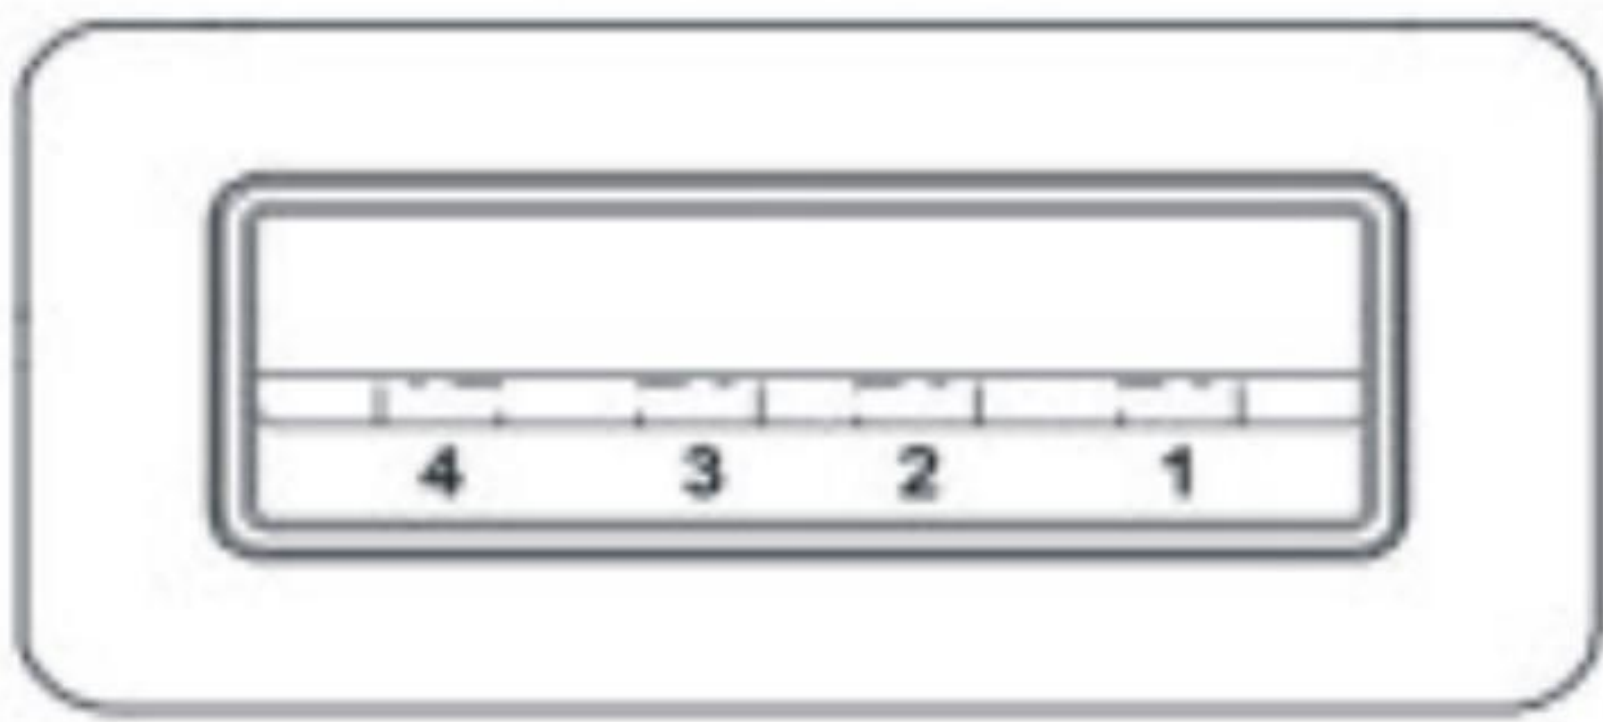 


 
- 1 VCC
- 2 DATA-(DM)
- 3 DATA+(DP)
- 4 GND

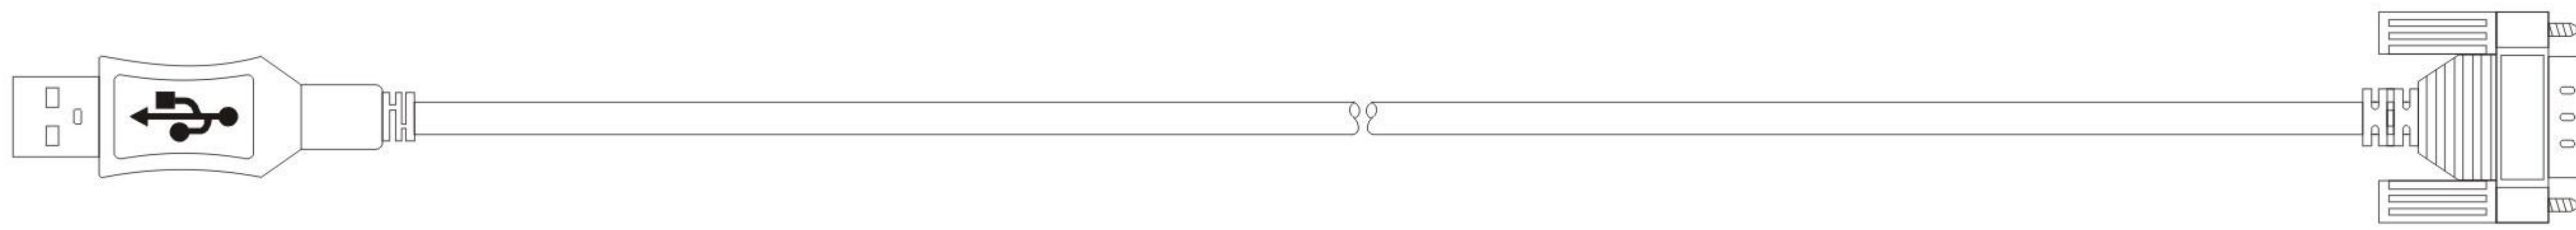

- 1 USBA
- 2 USB2.0
- 3
- 4 DB9
- 5 FTDI

USB RS-232

  1 N/C 2 RXD 3 TXD 4 N/C 5 GND 6 N/C 7 RTS 8 CTS 9 N/C

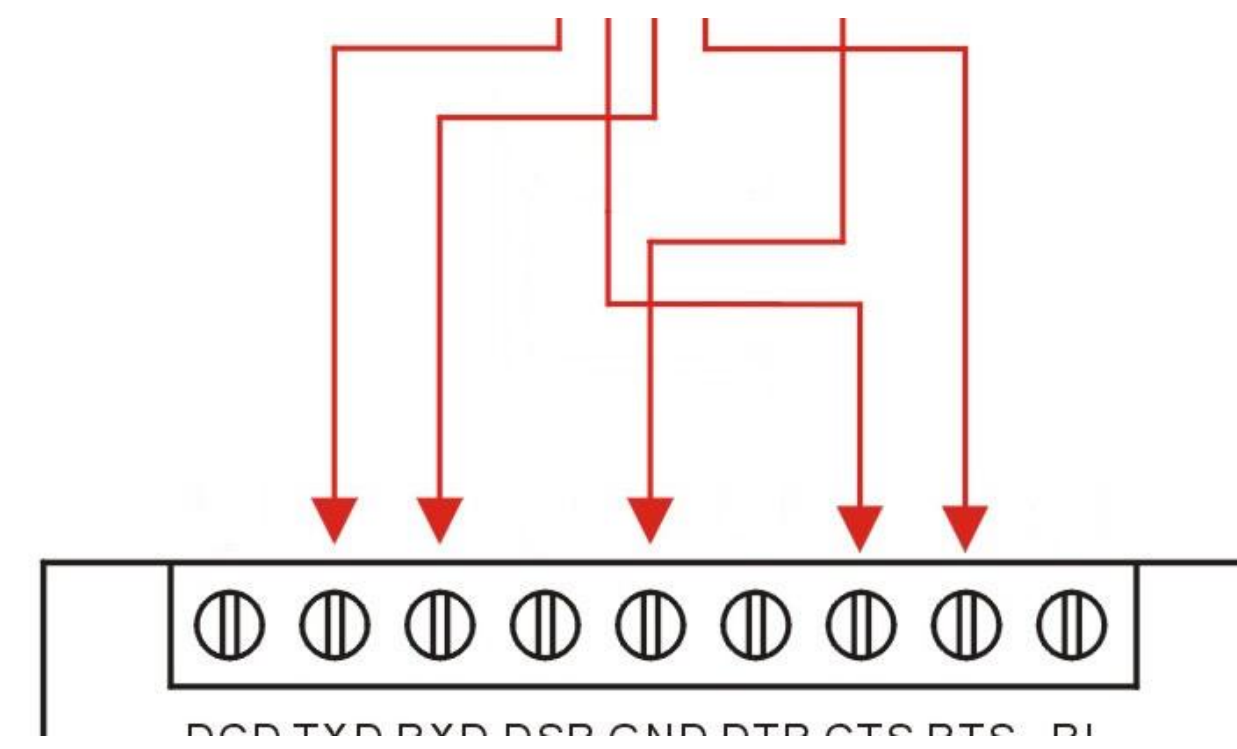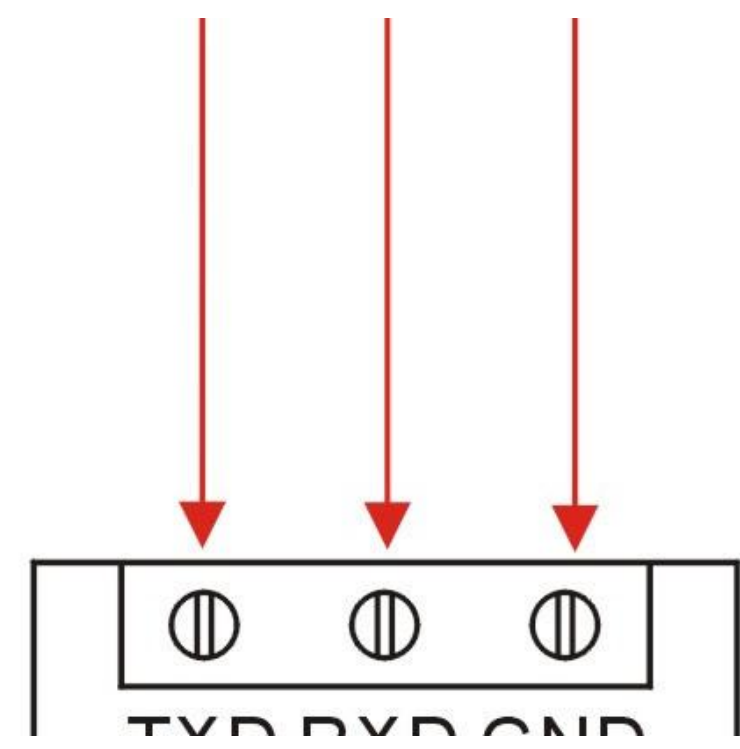

1

- A USB
- B RS-232
- C
- D

 
2

- A

UT-883



, [



()]

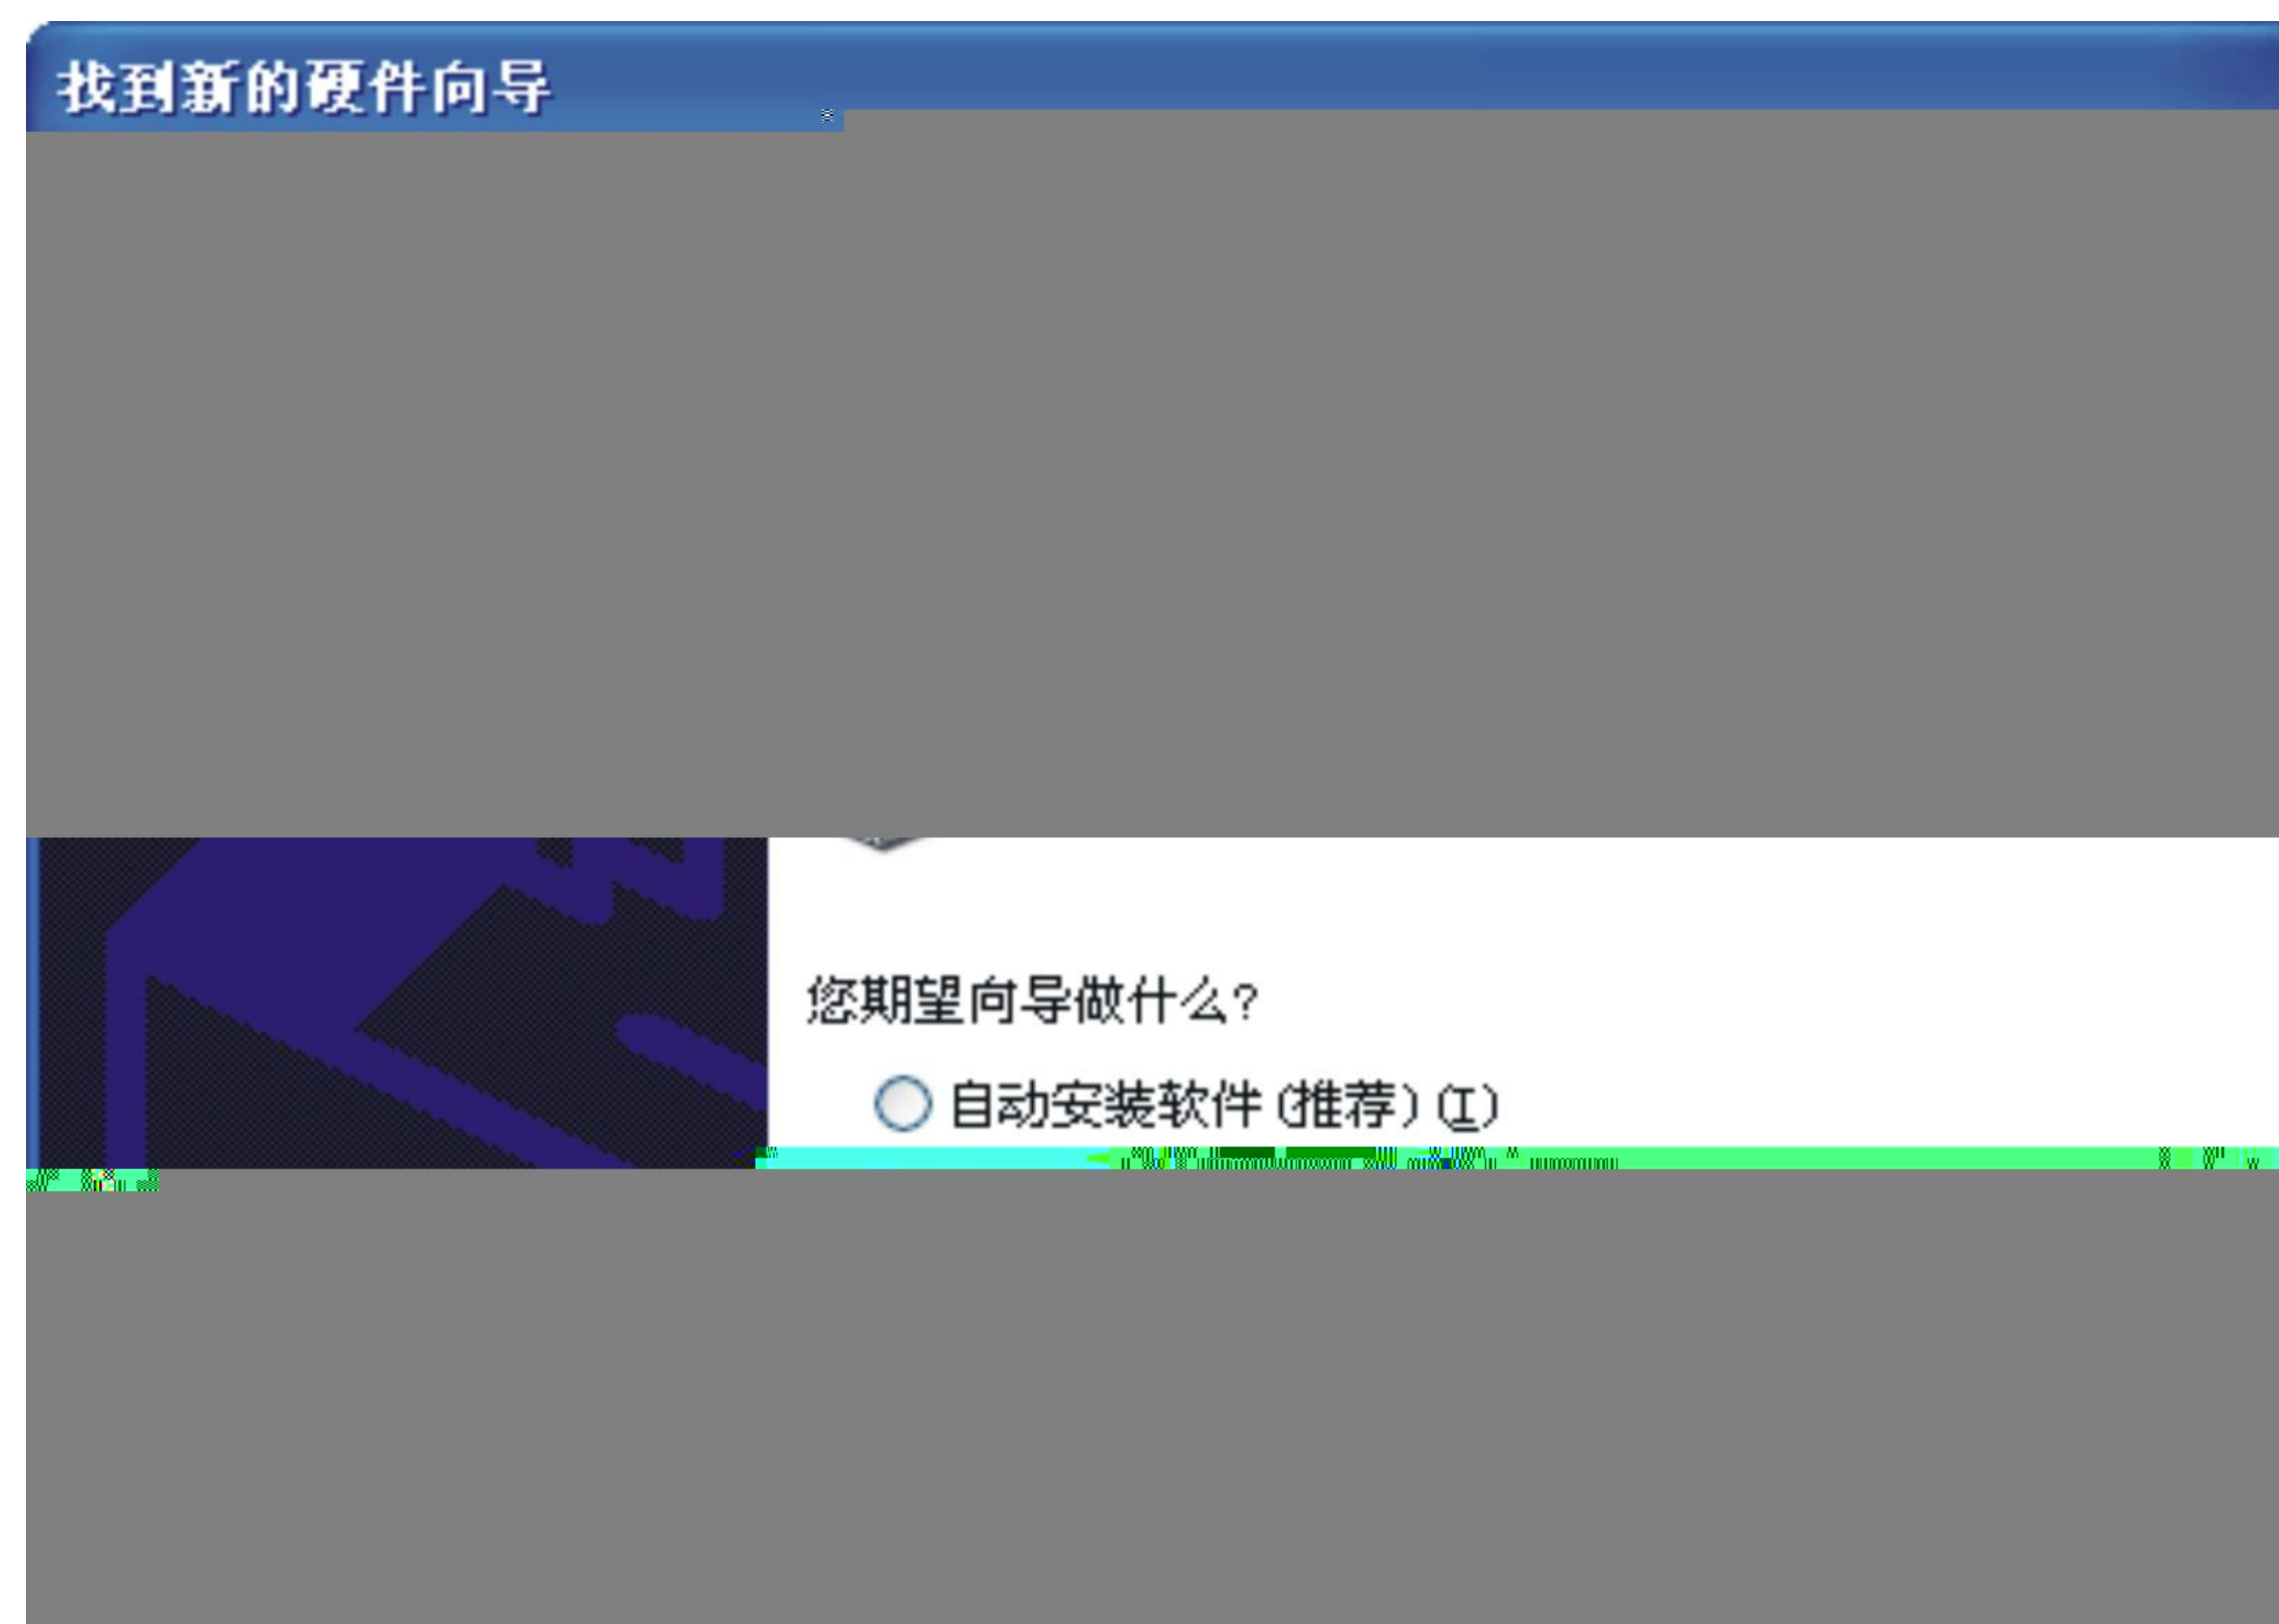


D]

    [

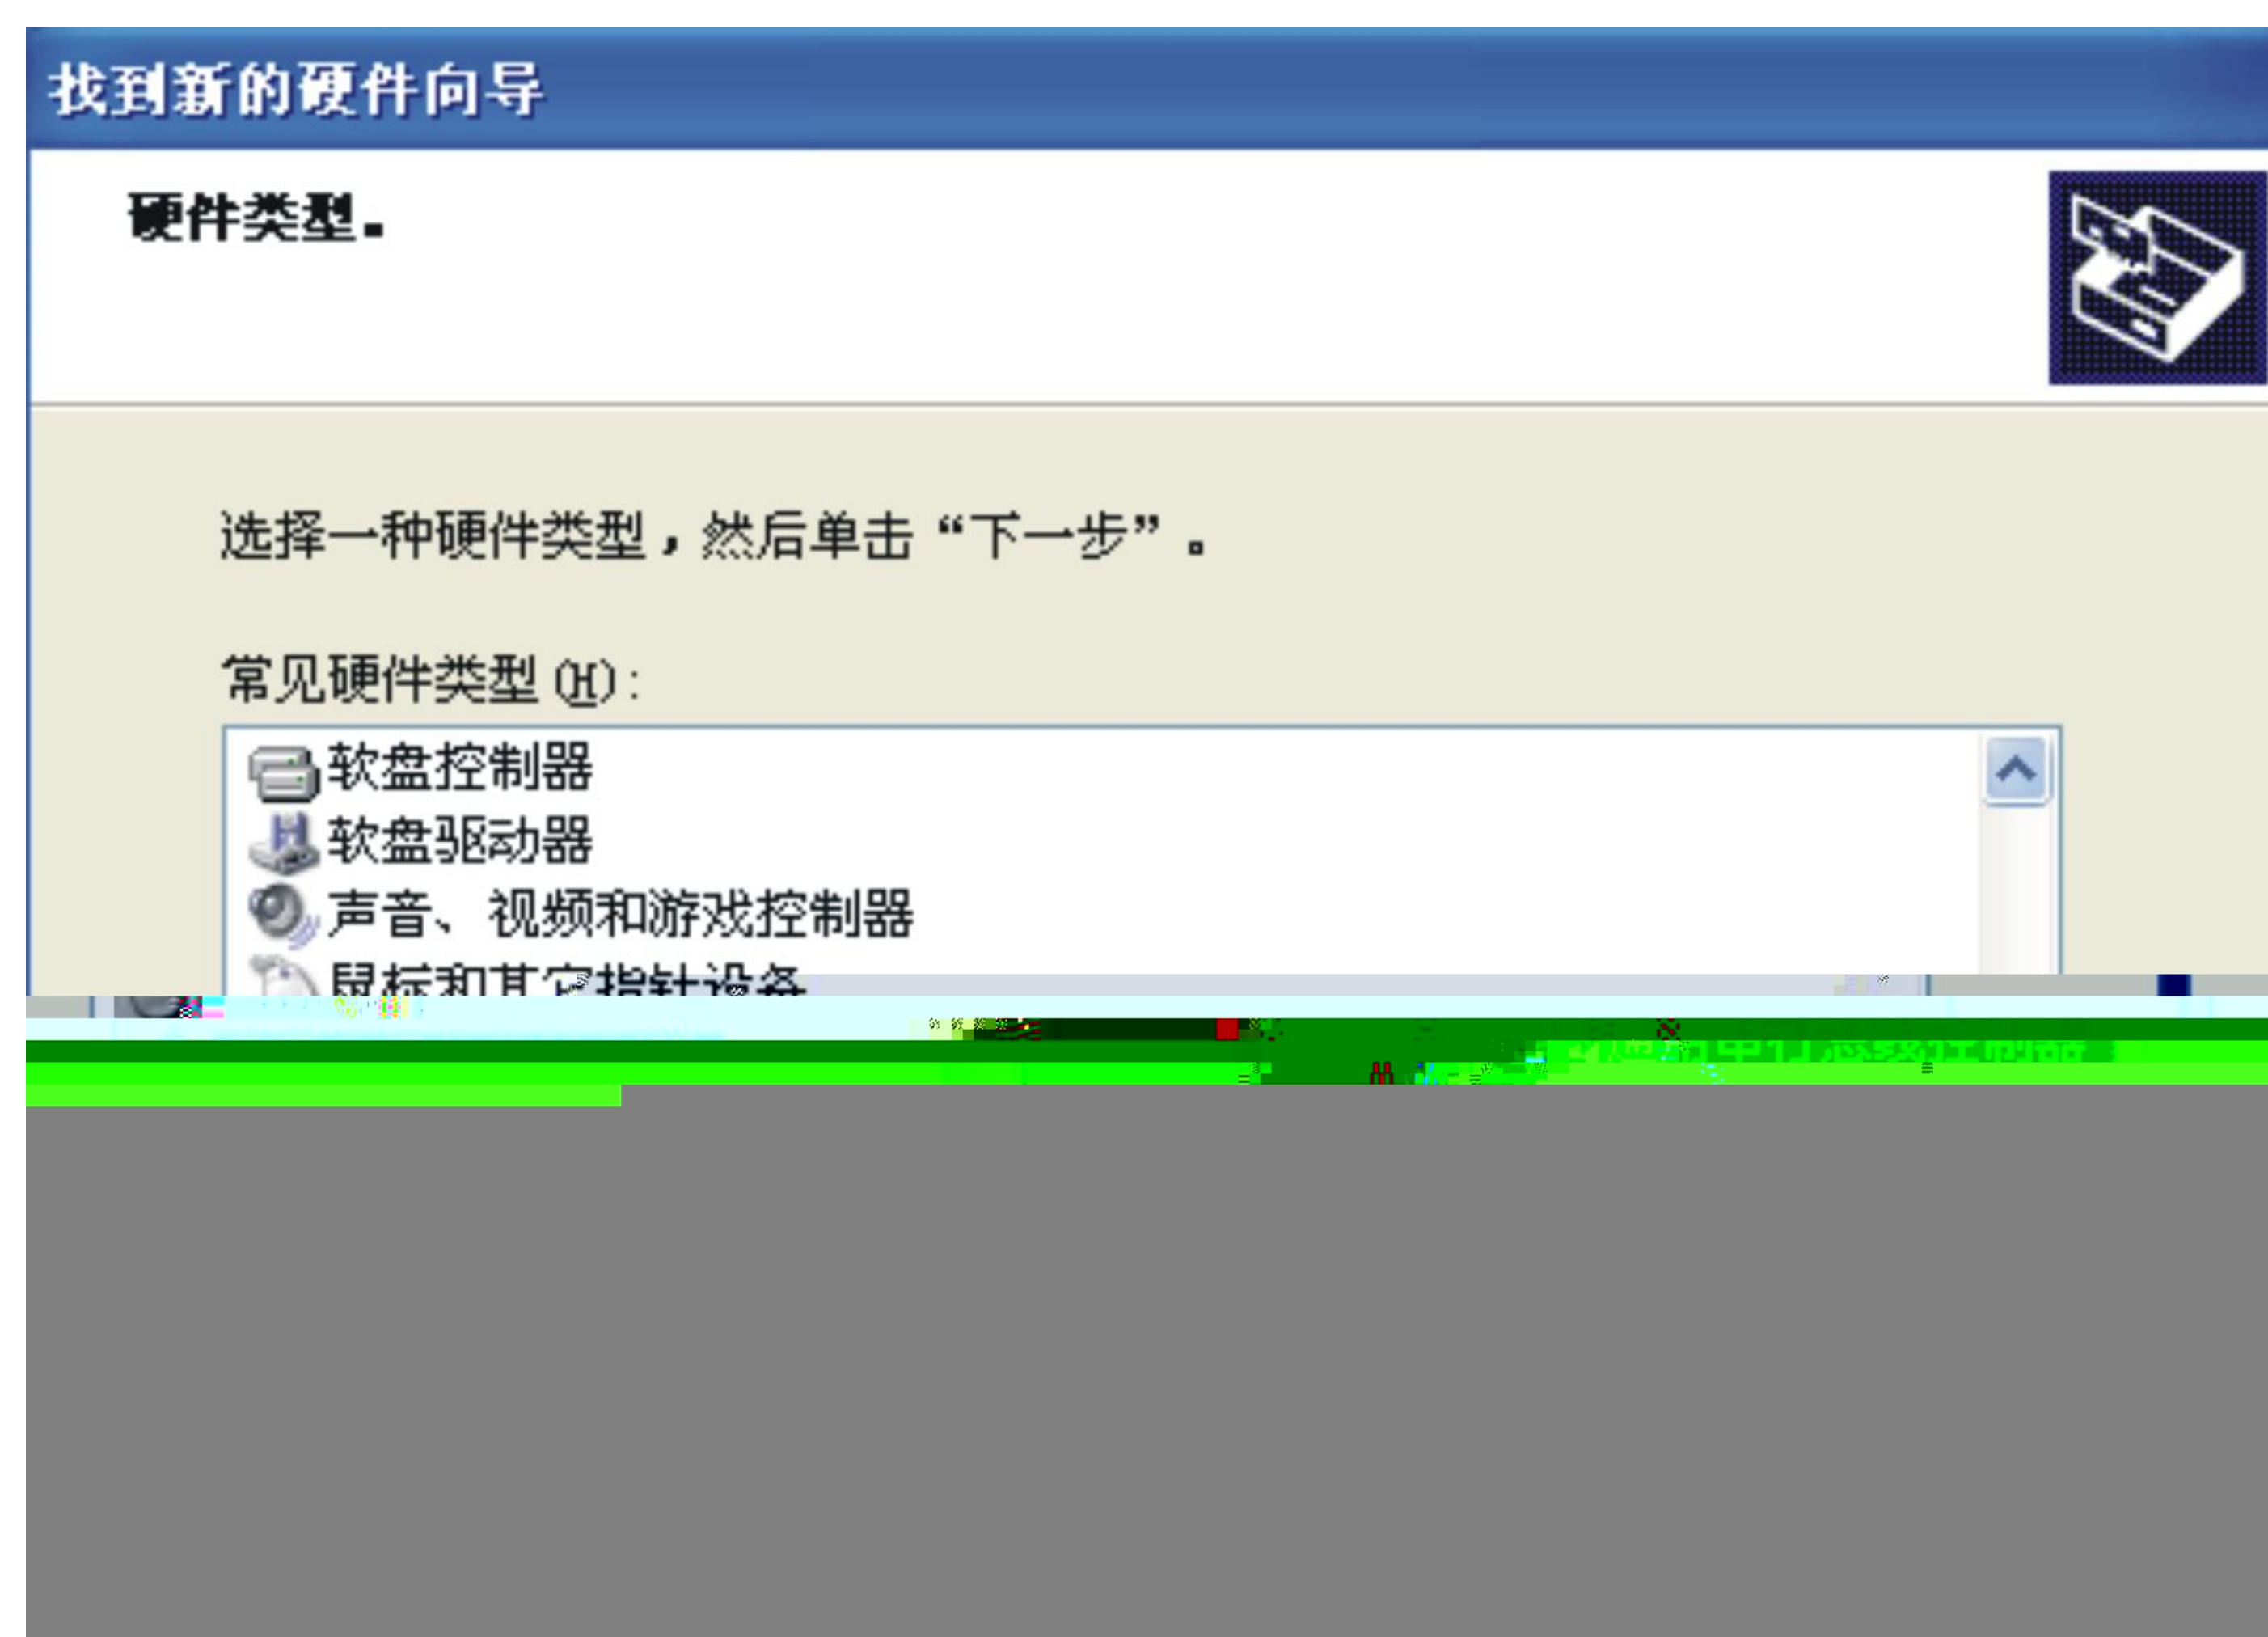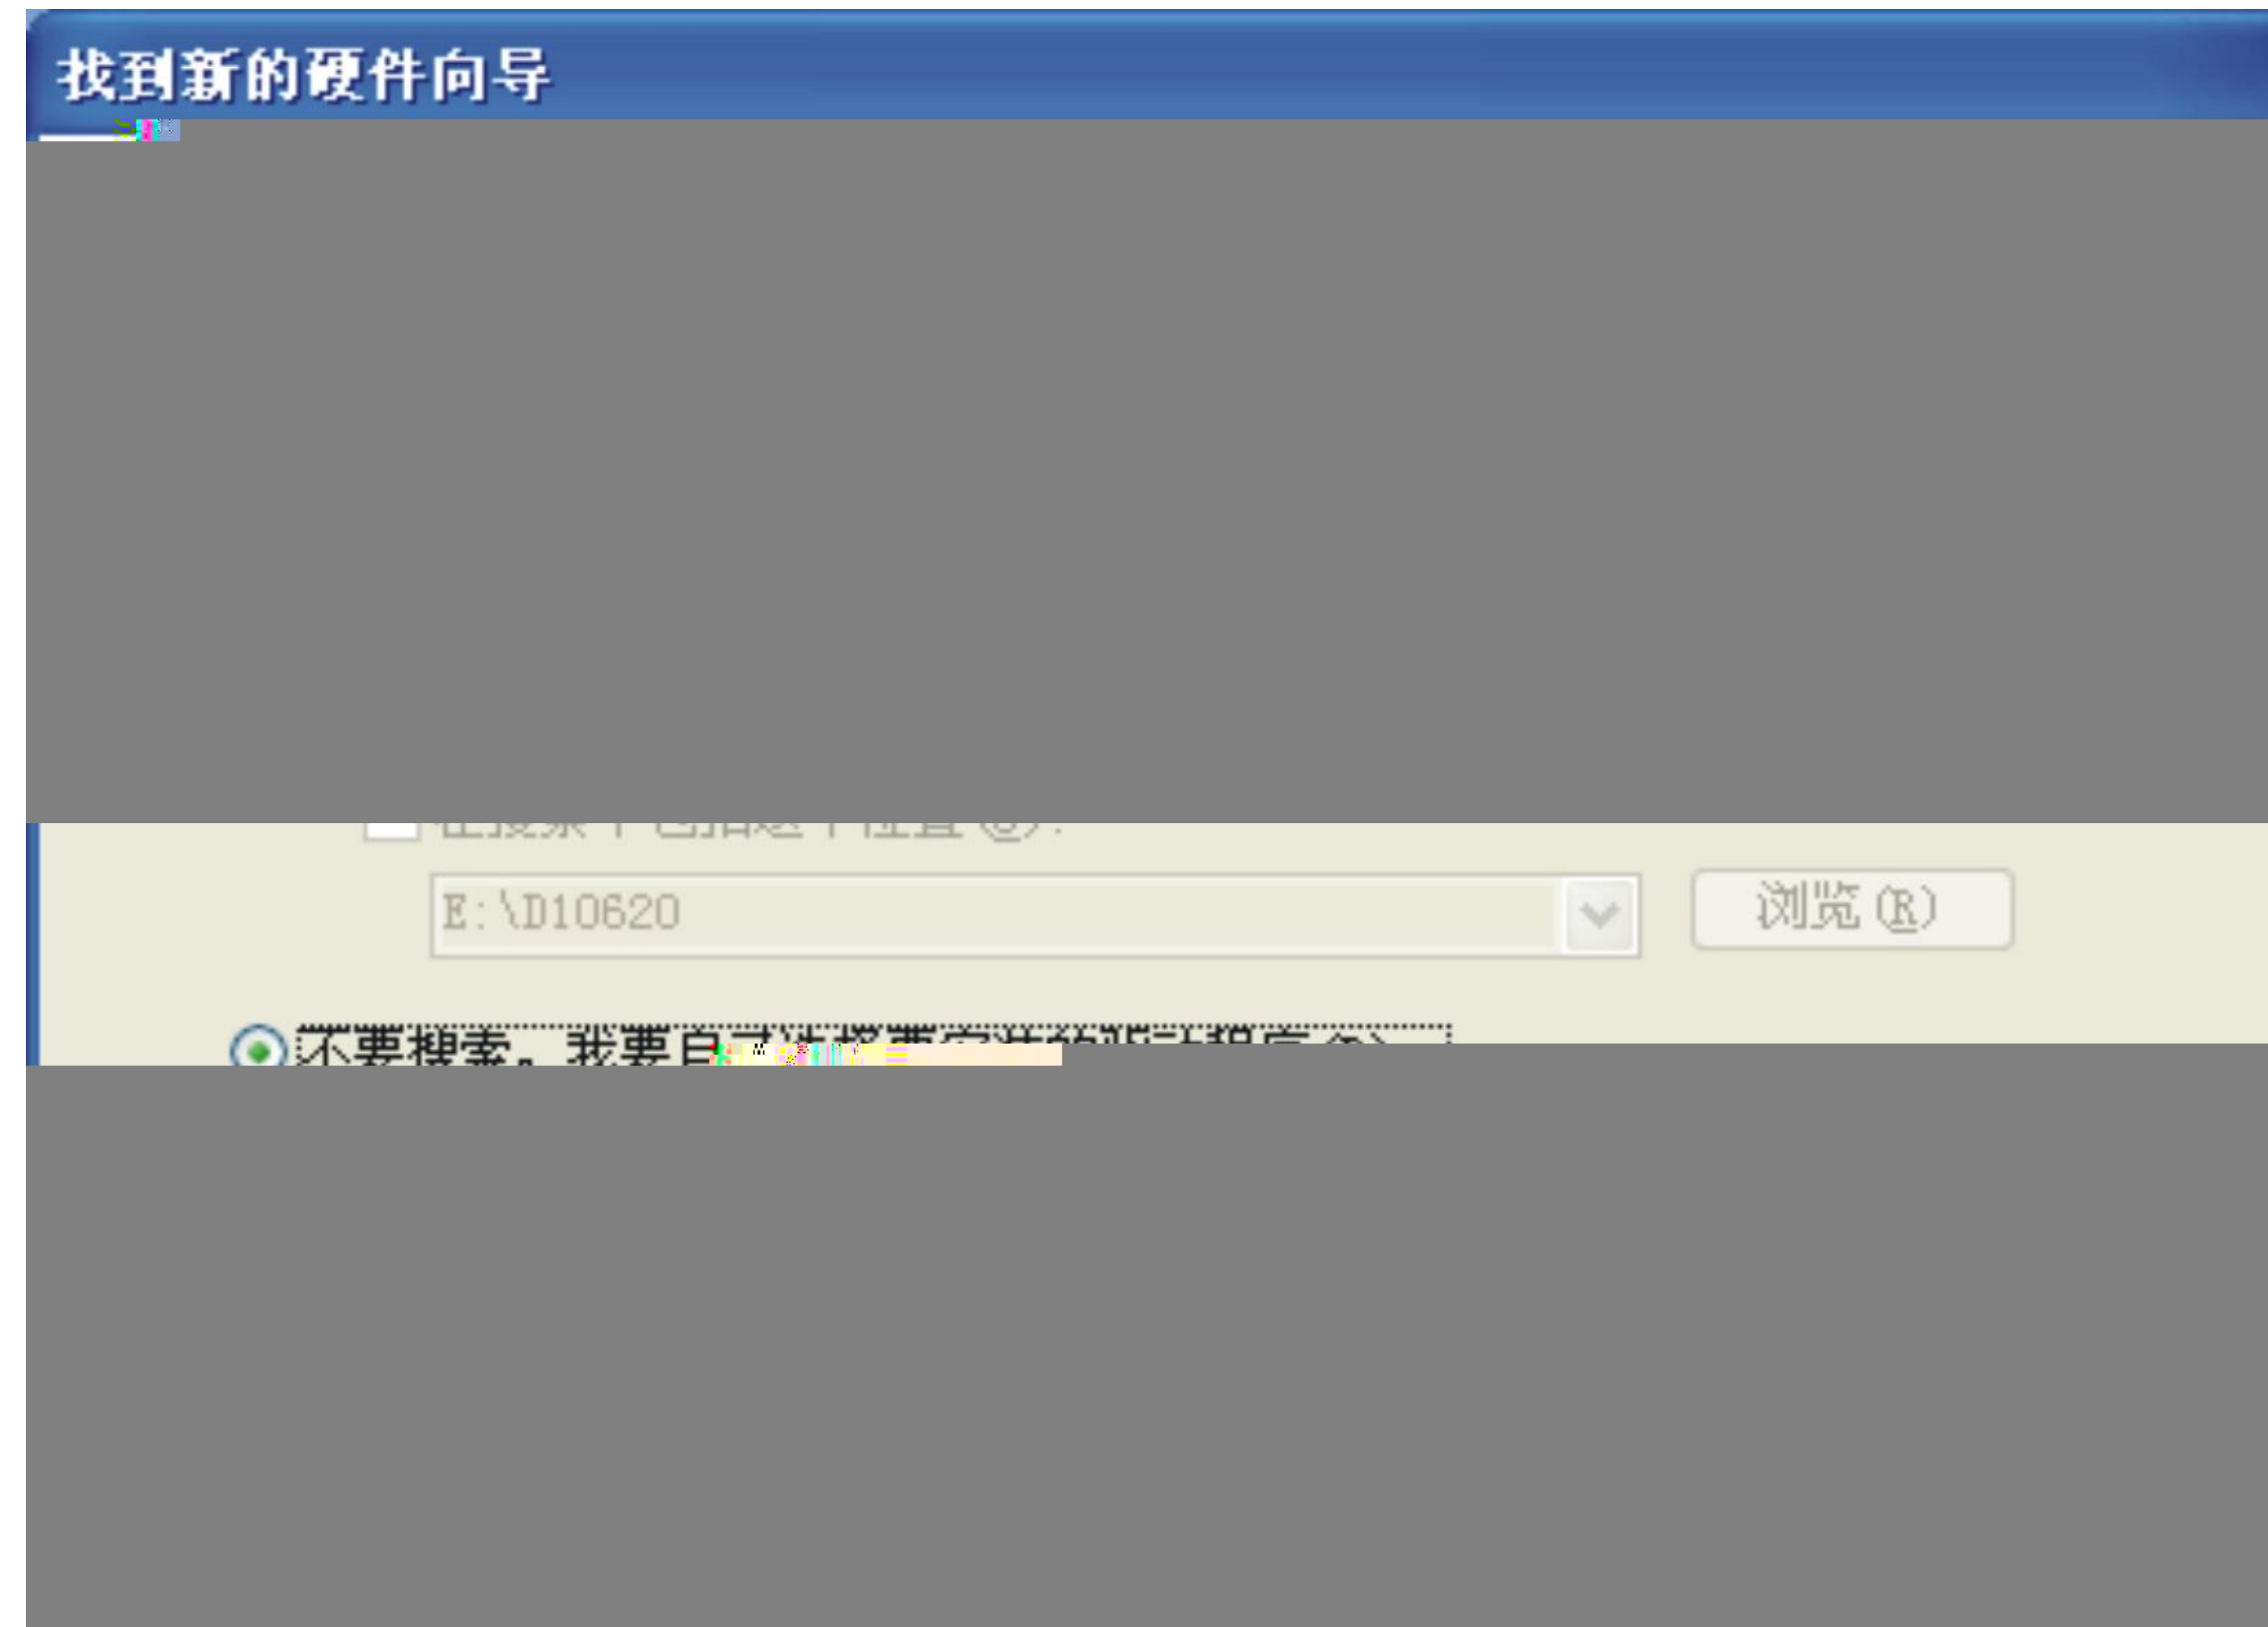


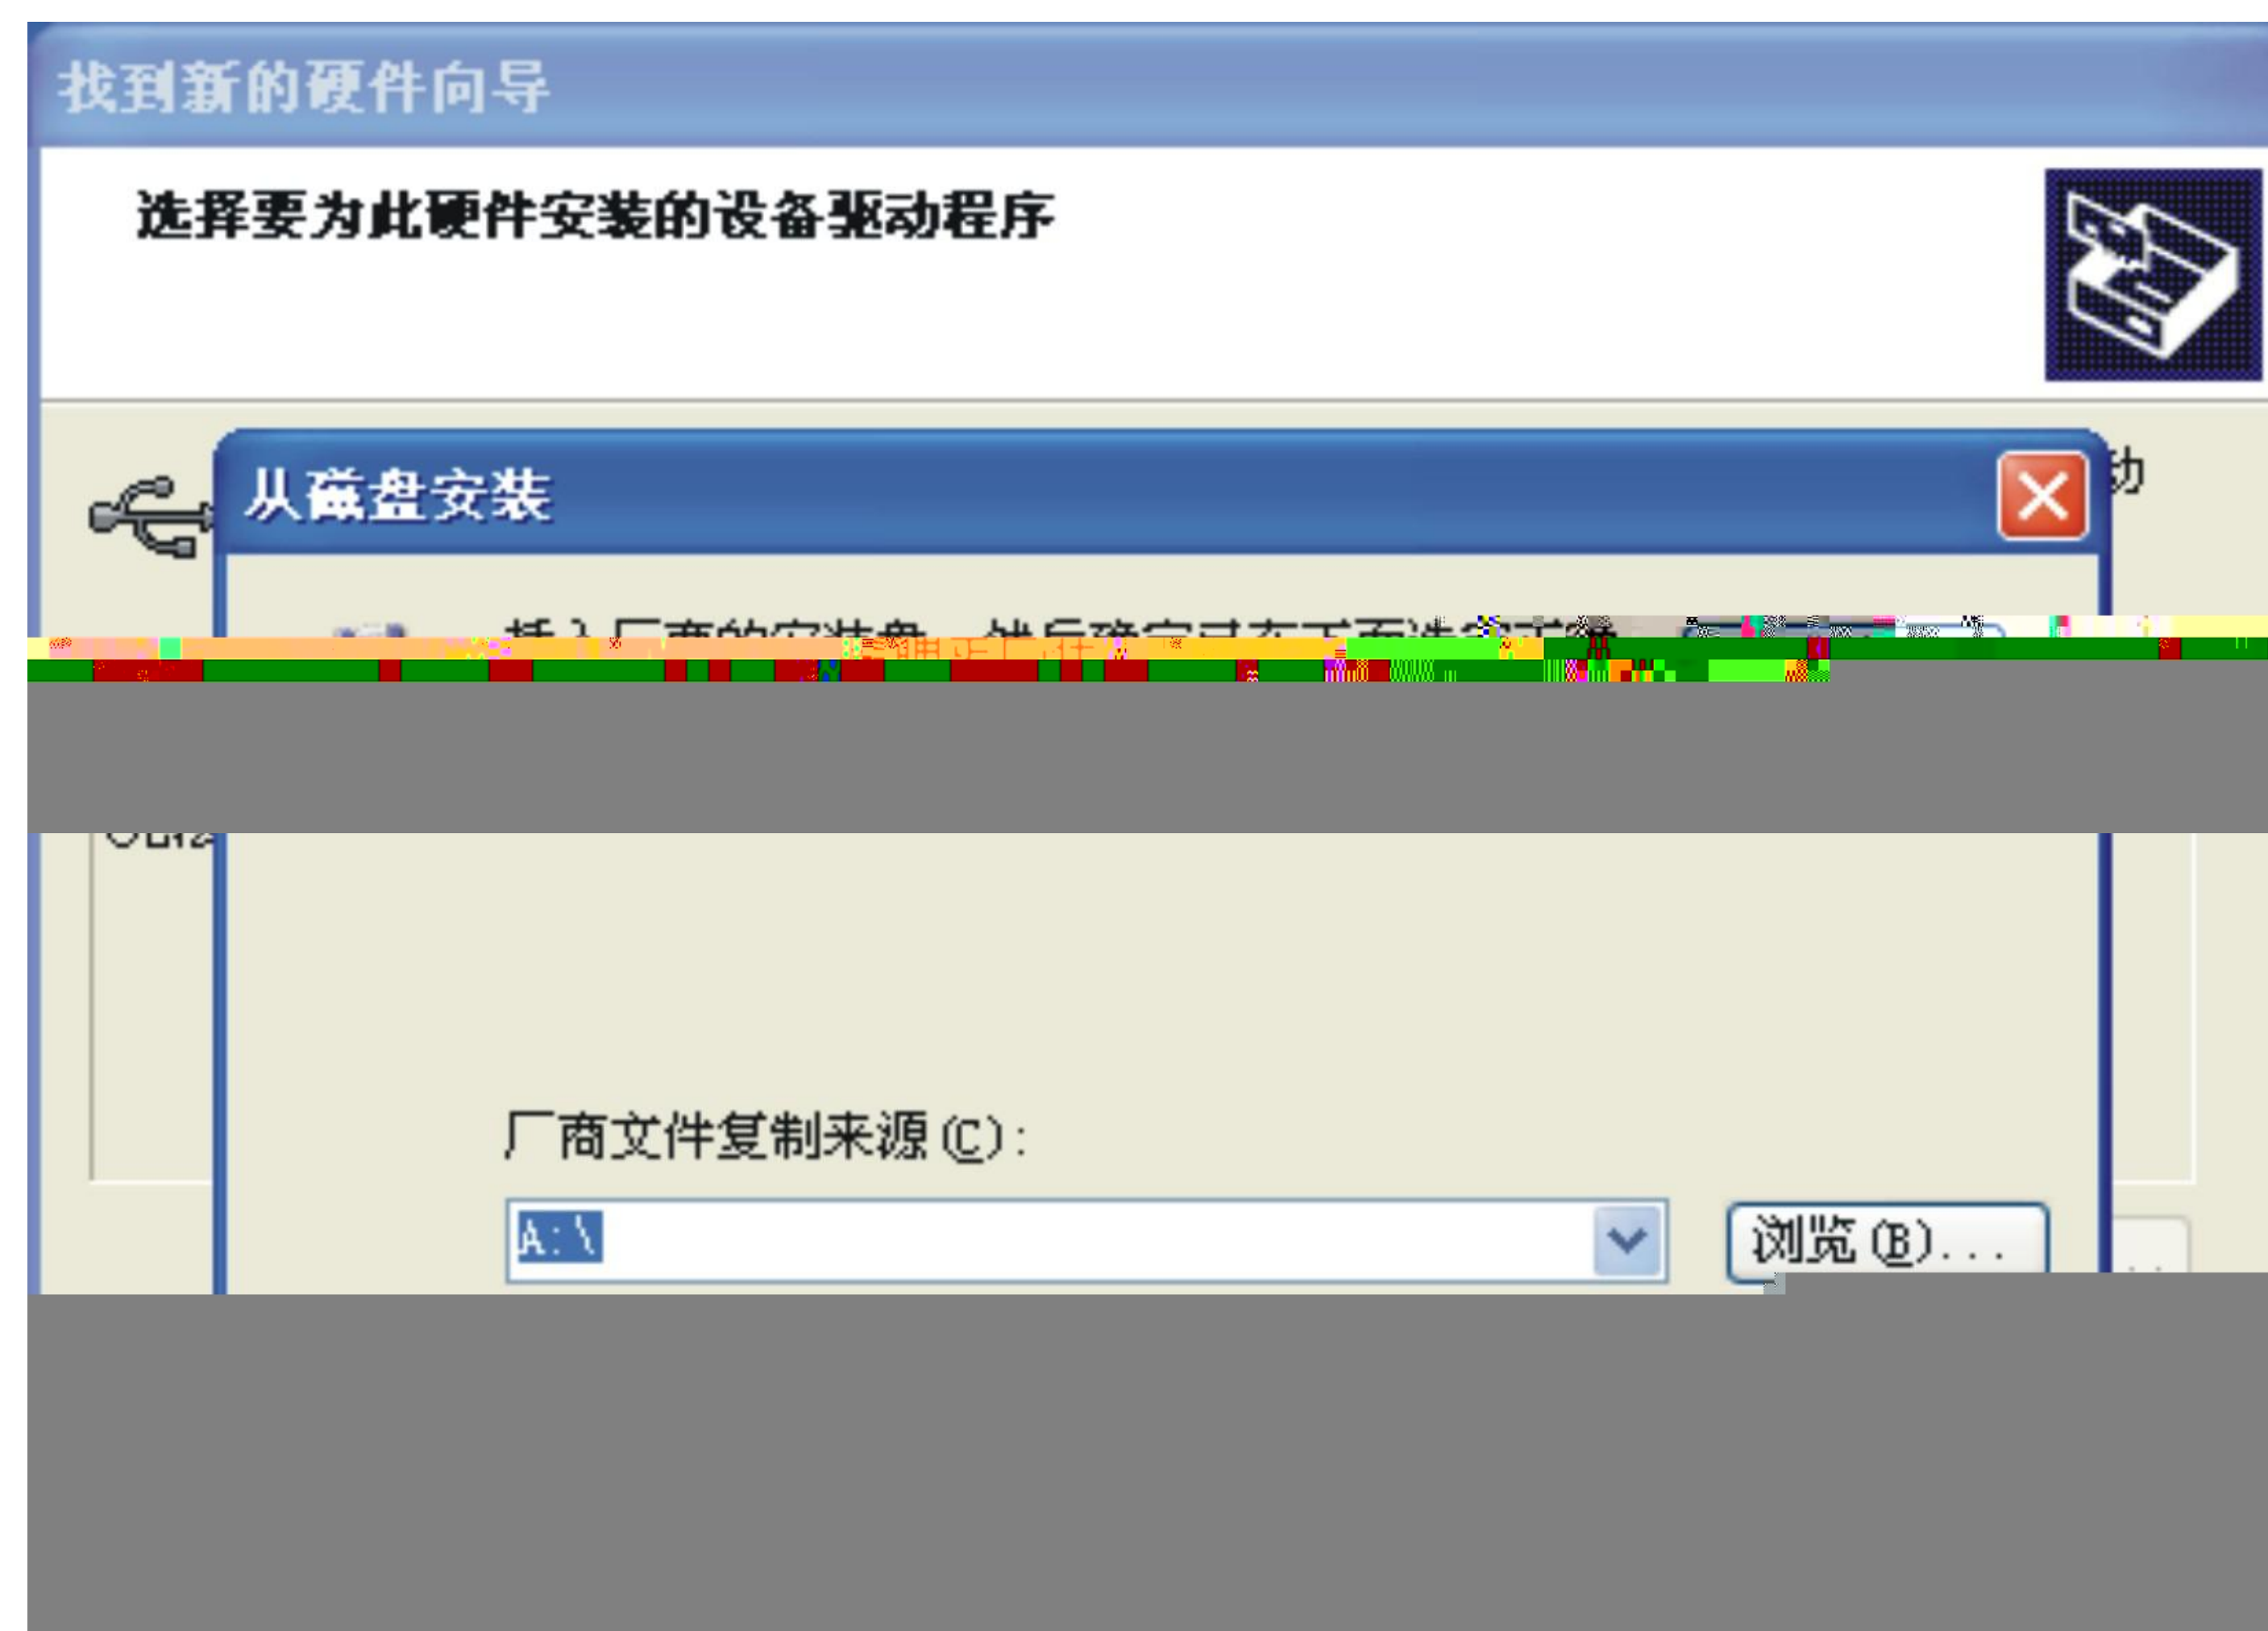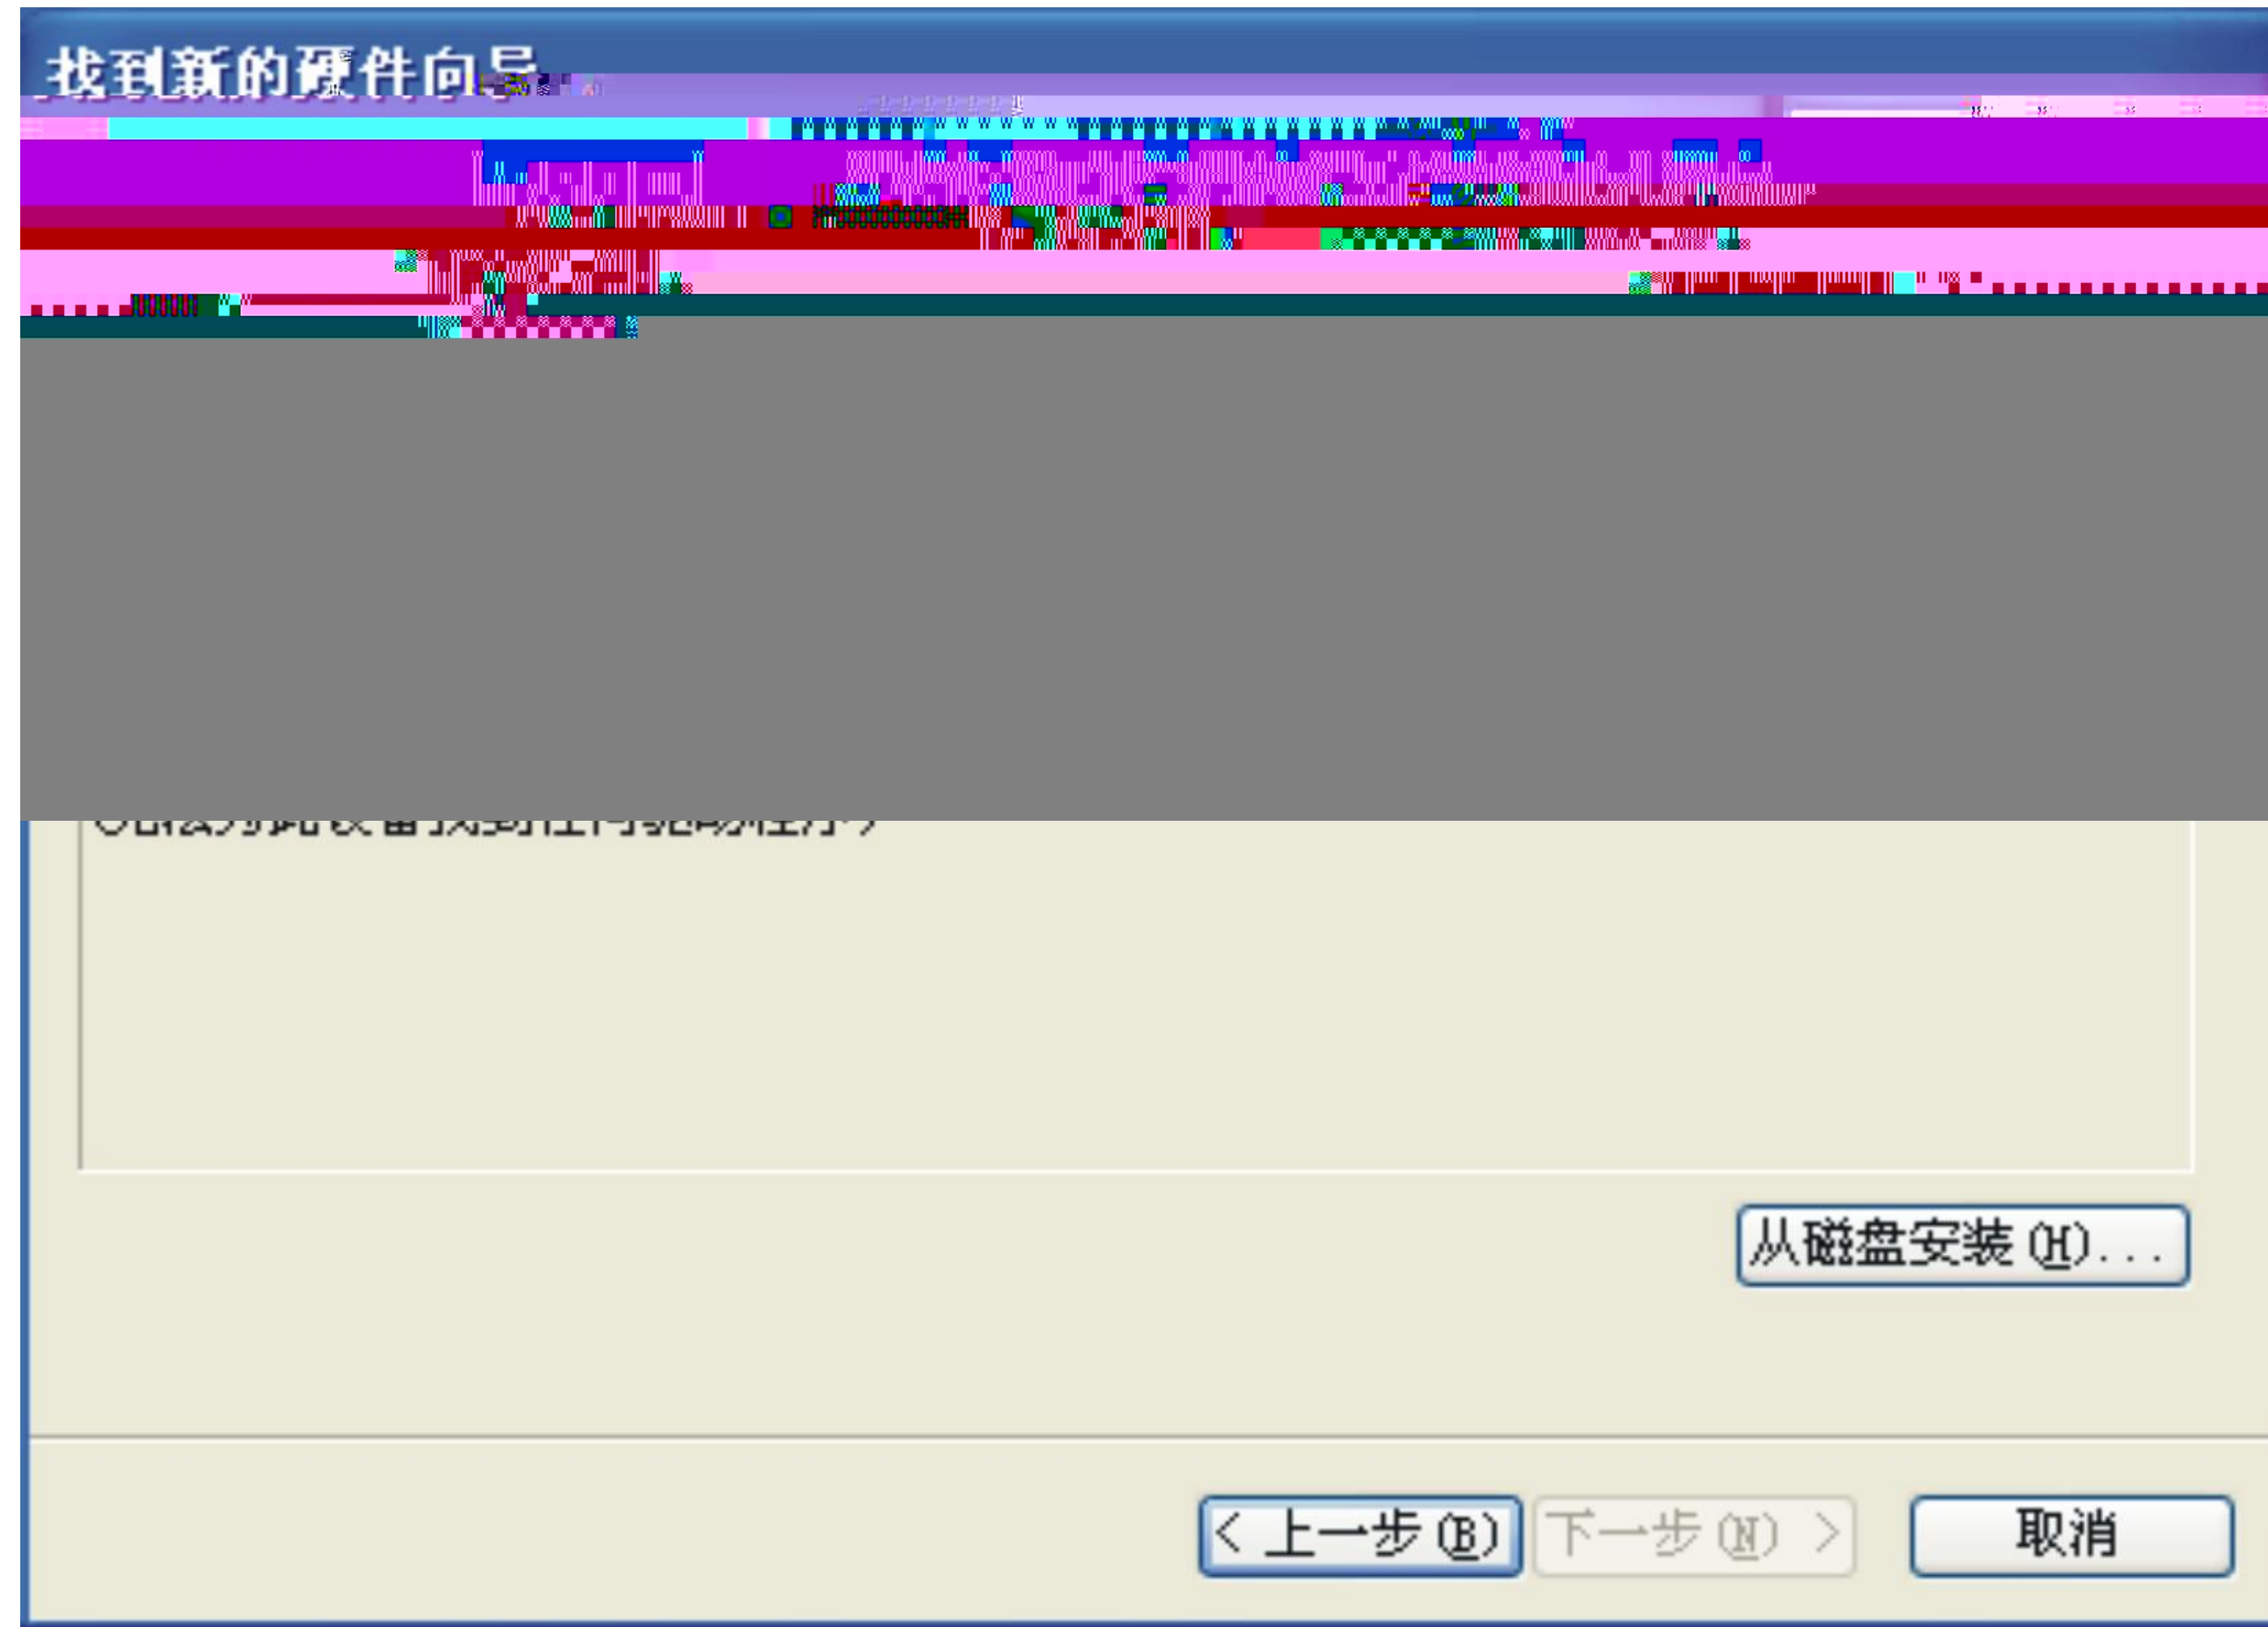


USB 2.0 TO Rs232 Cable)

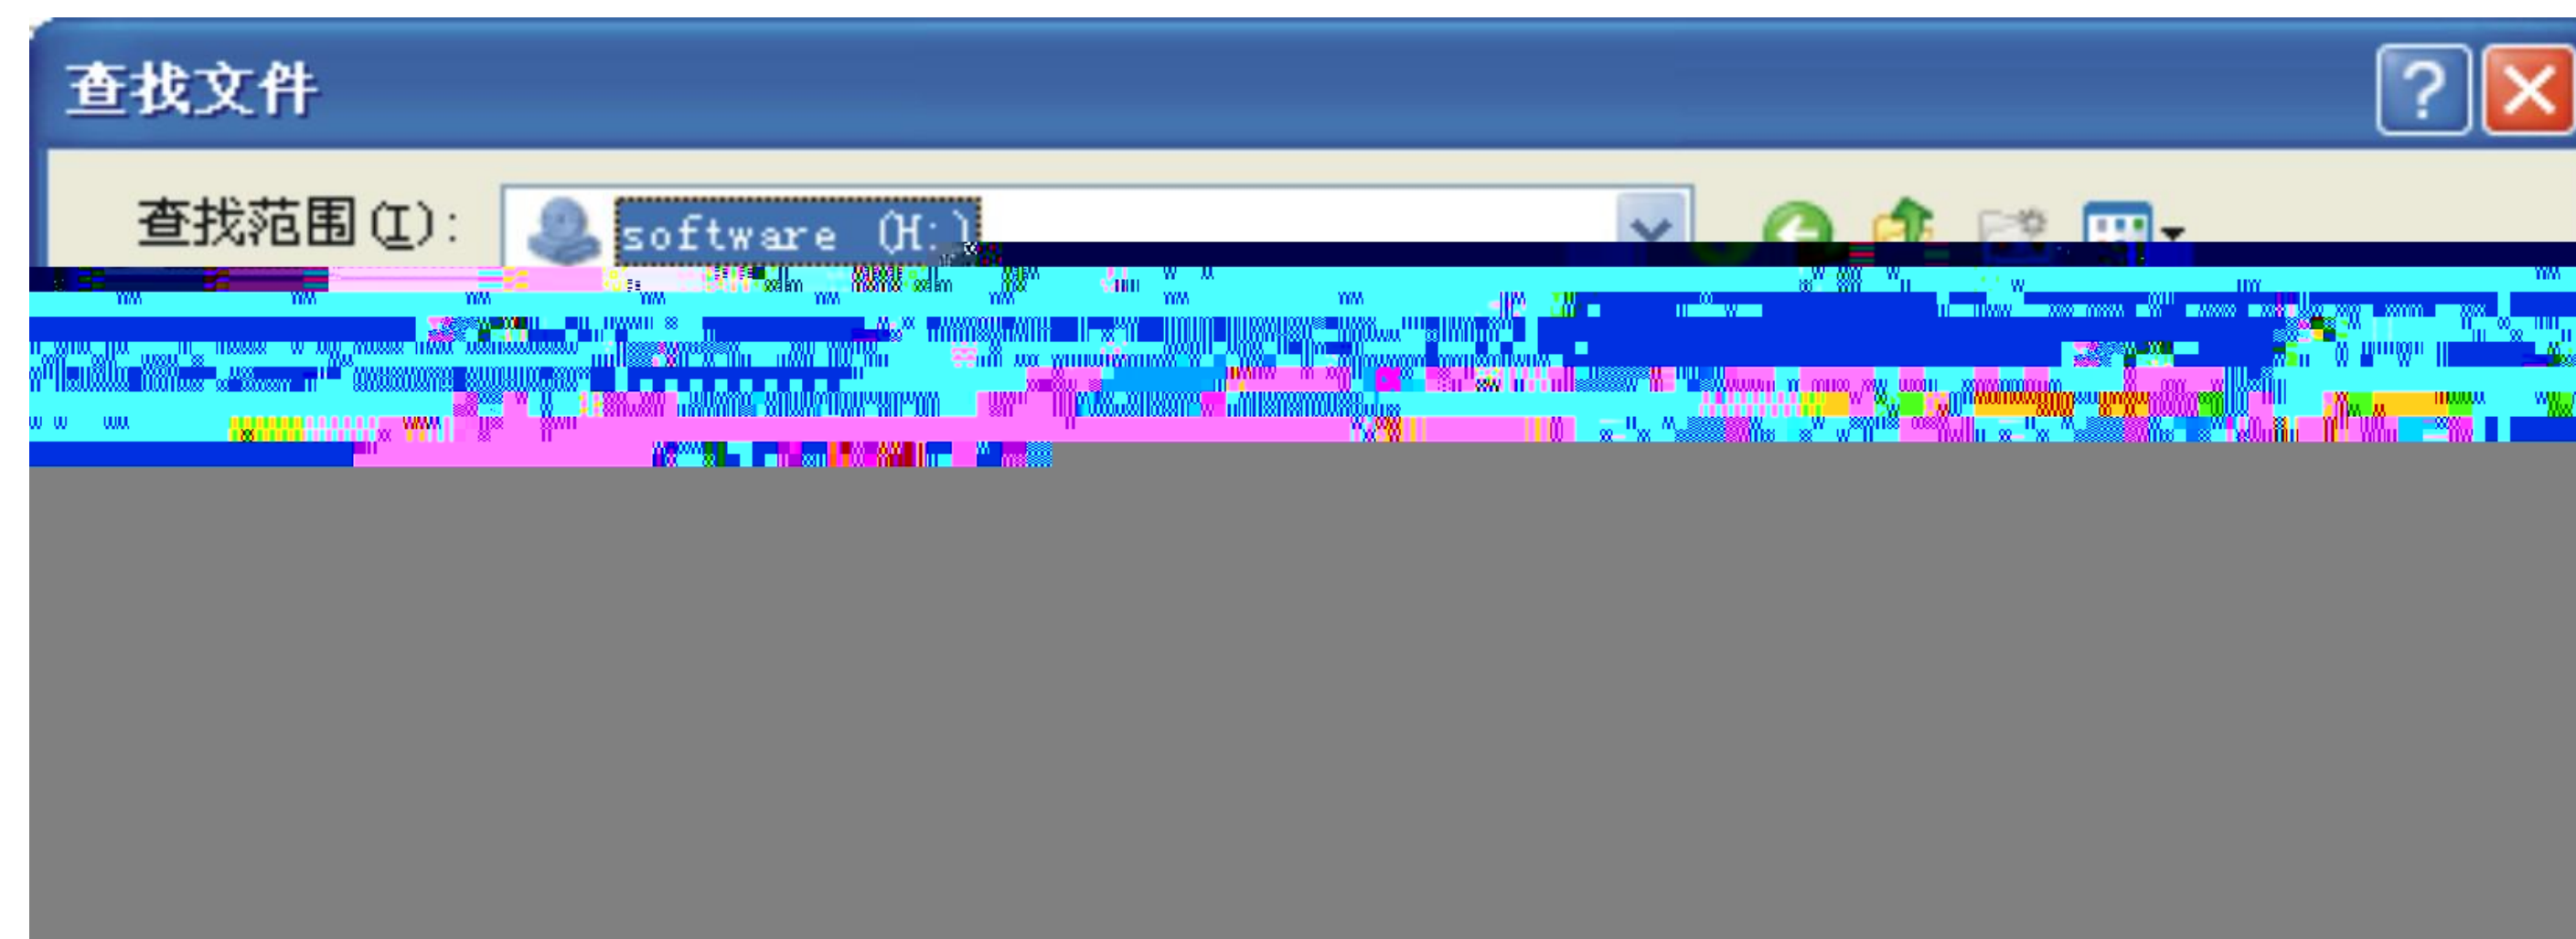 


  Server2003x64)
windows xp, Windows Vista Vista x64 xp xp64 2000 Server2003

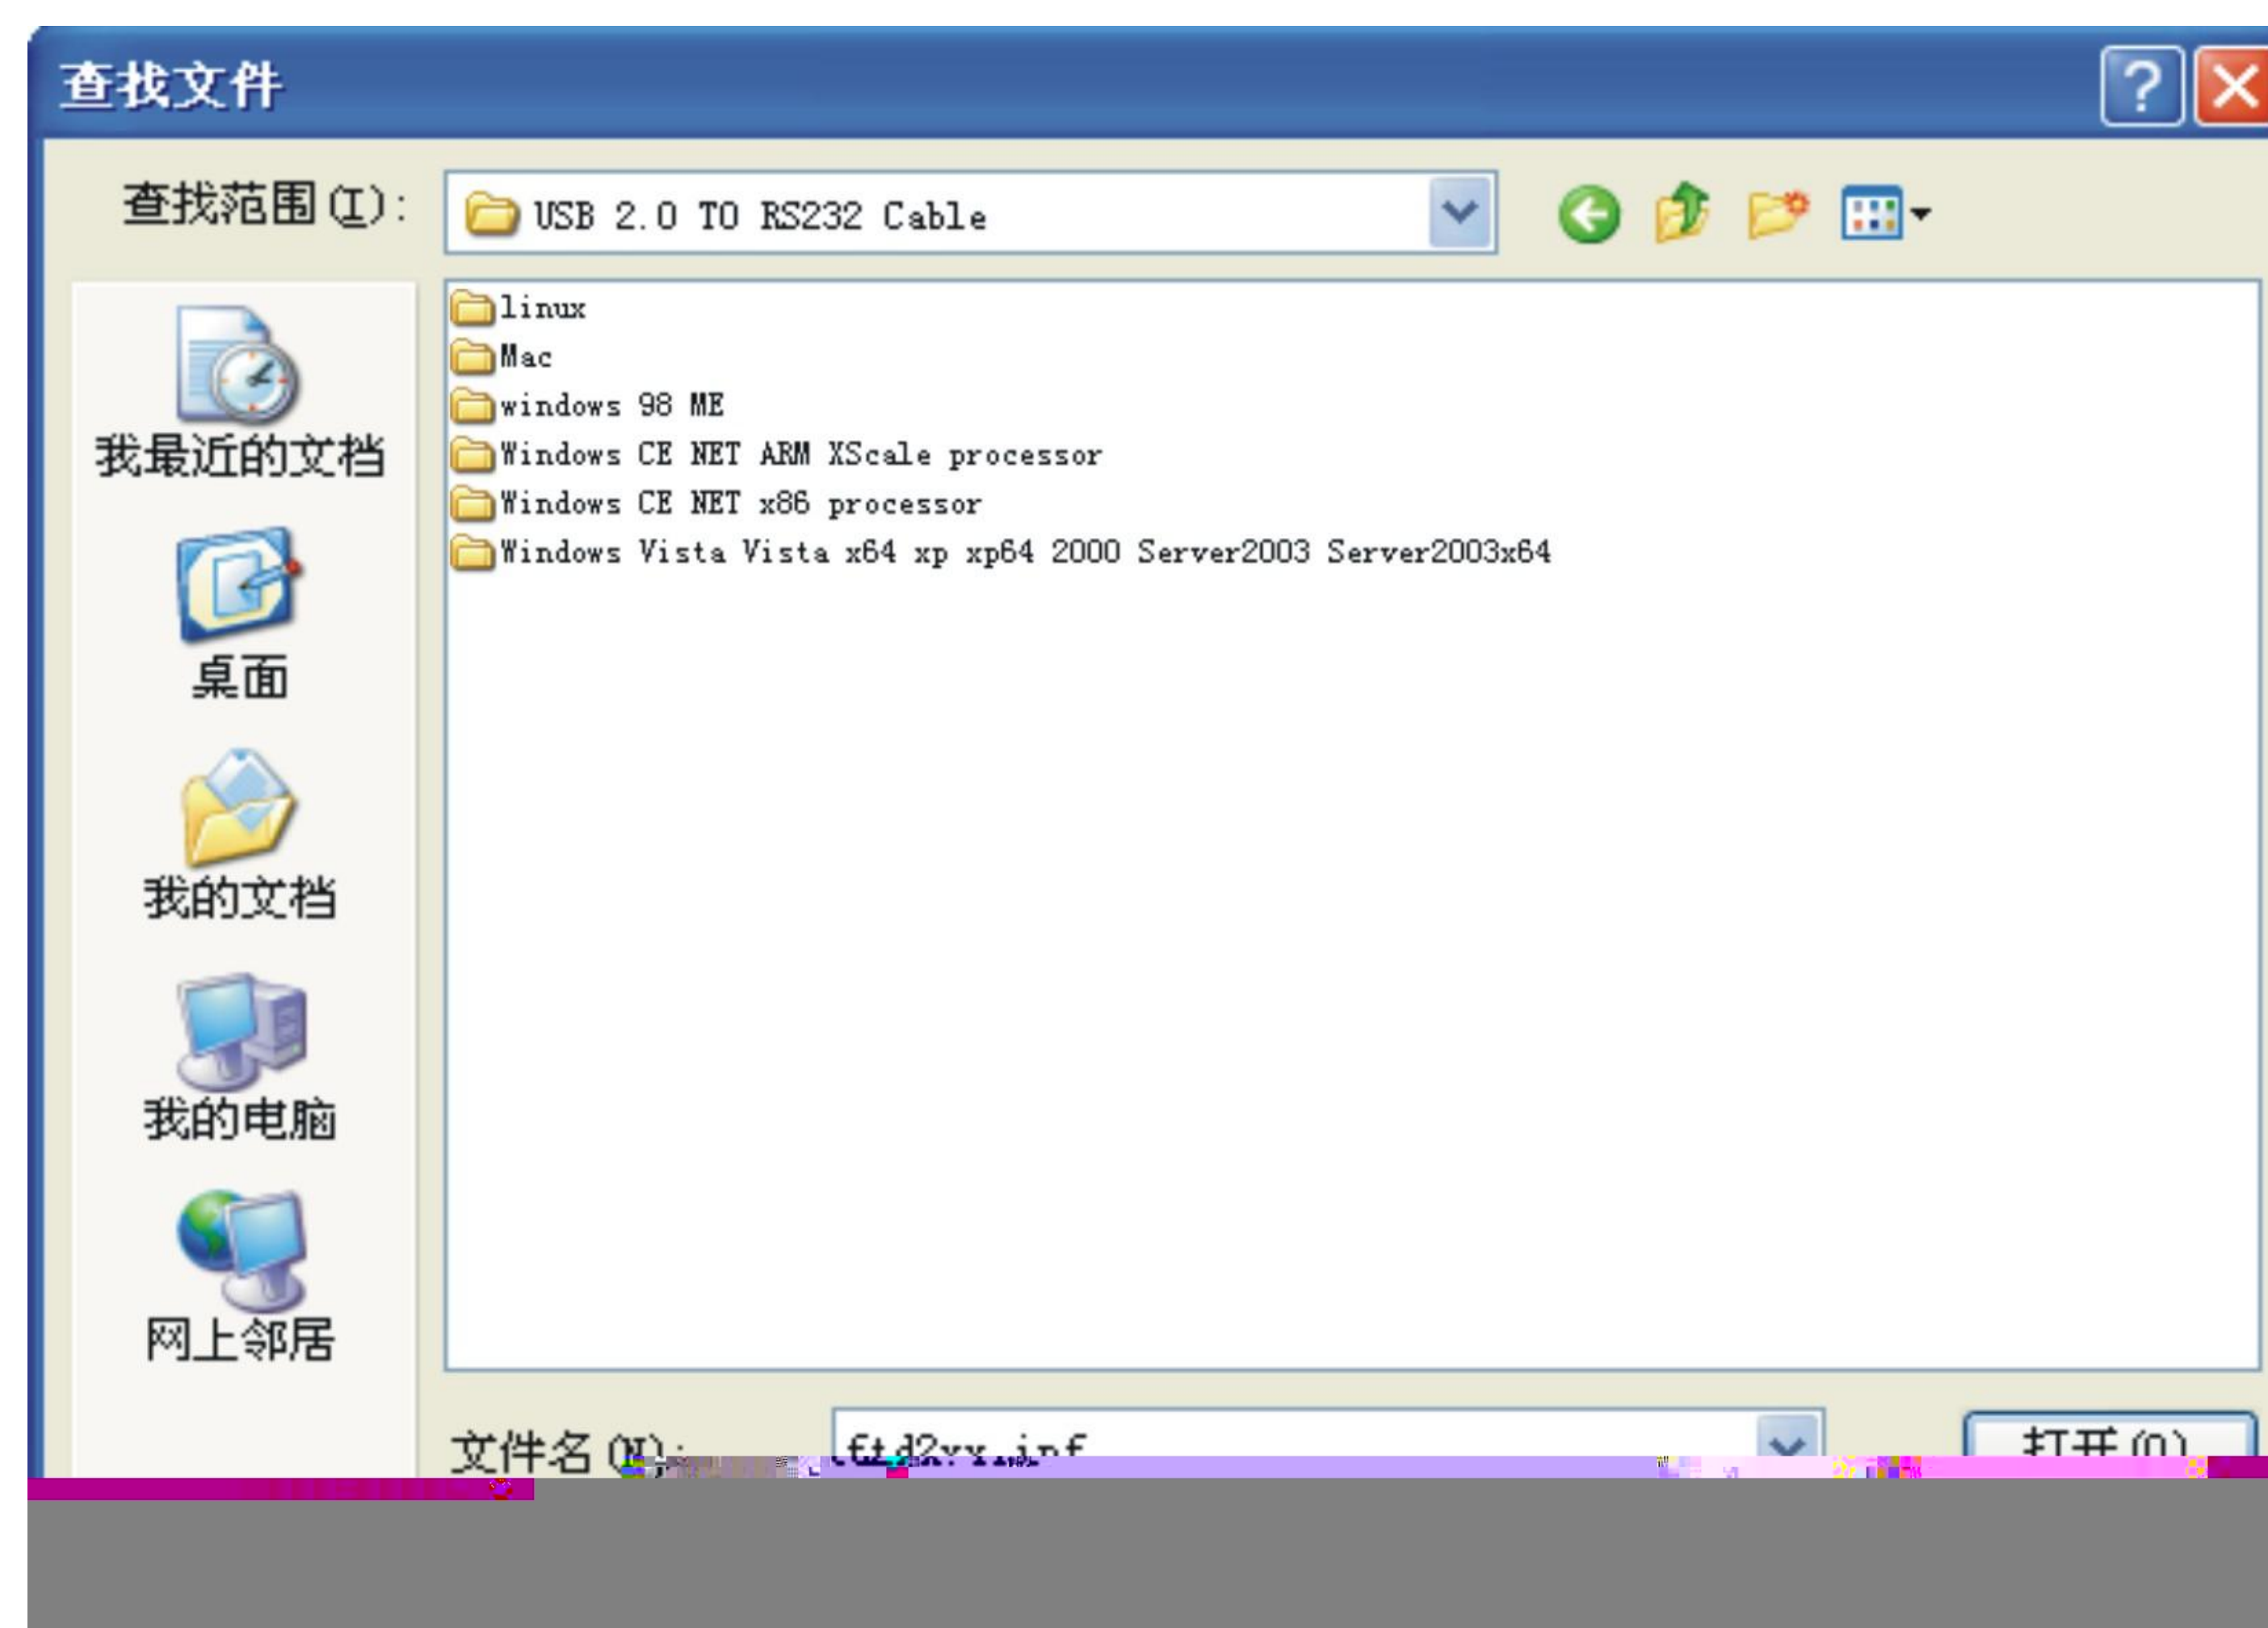

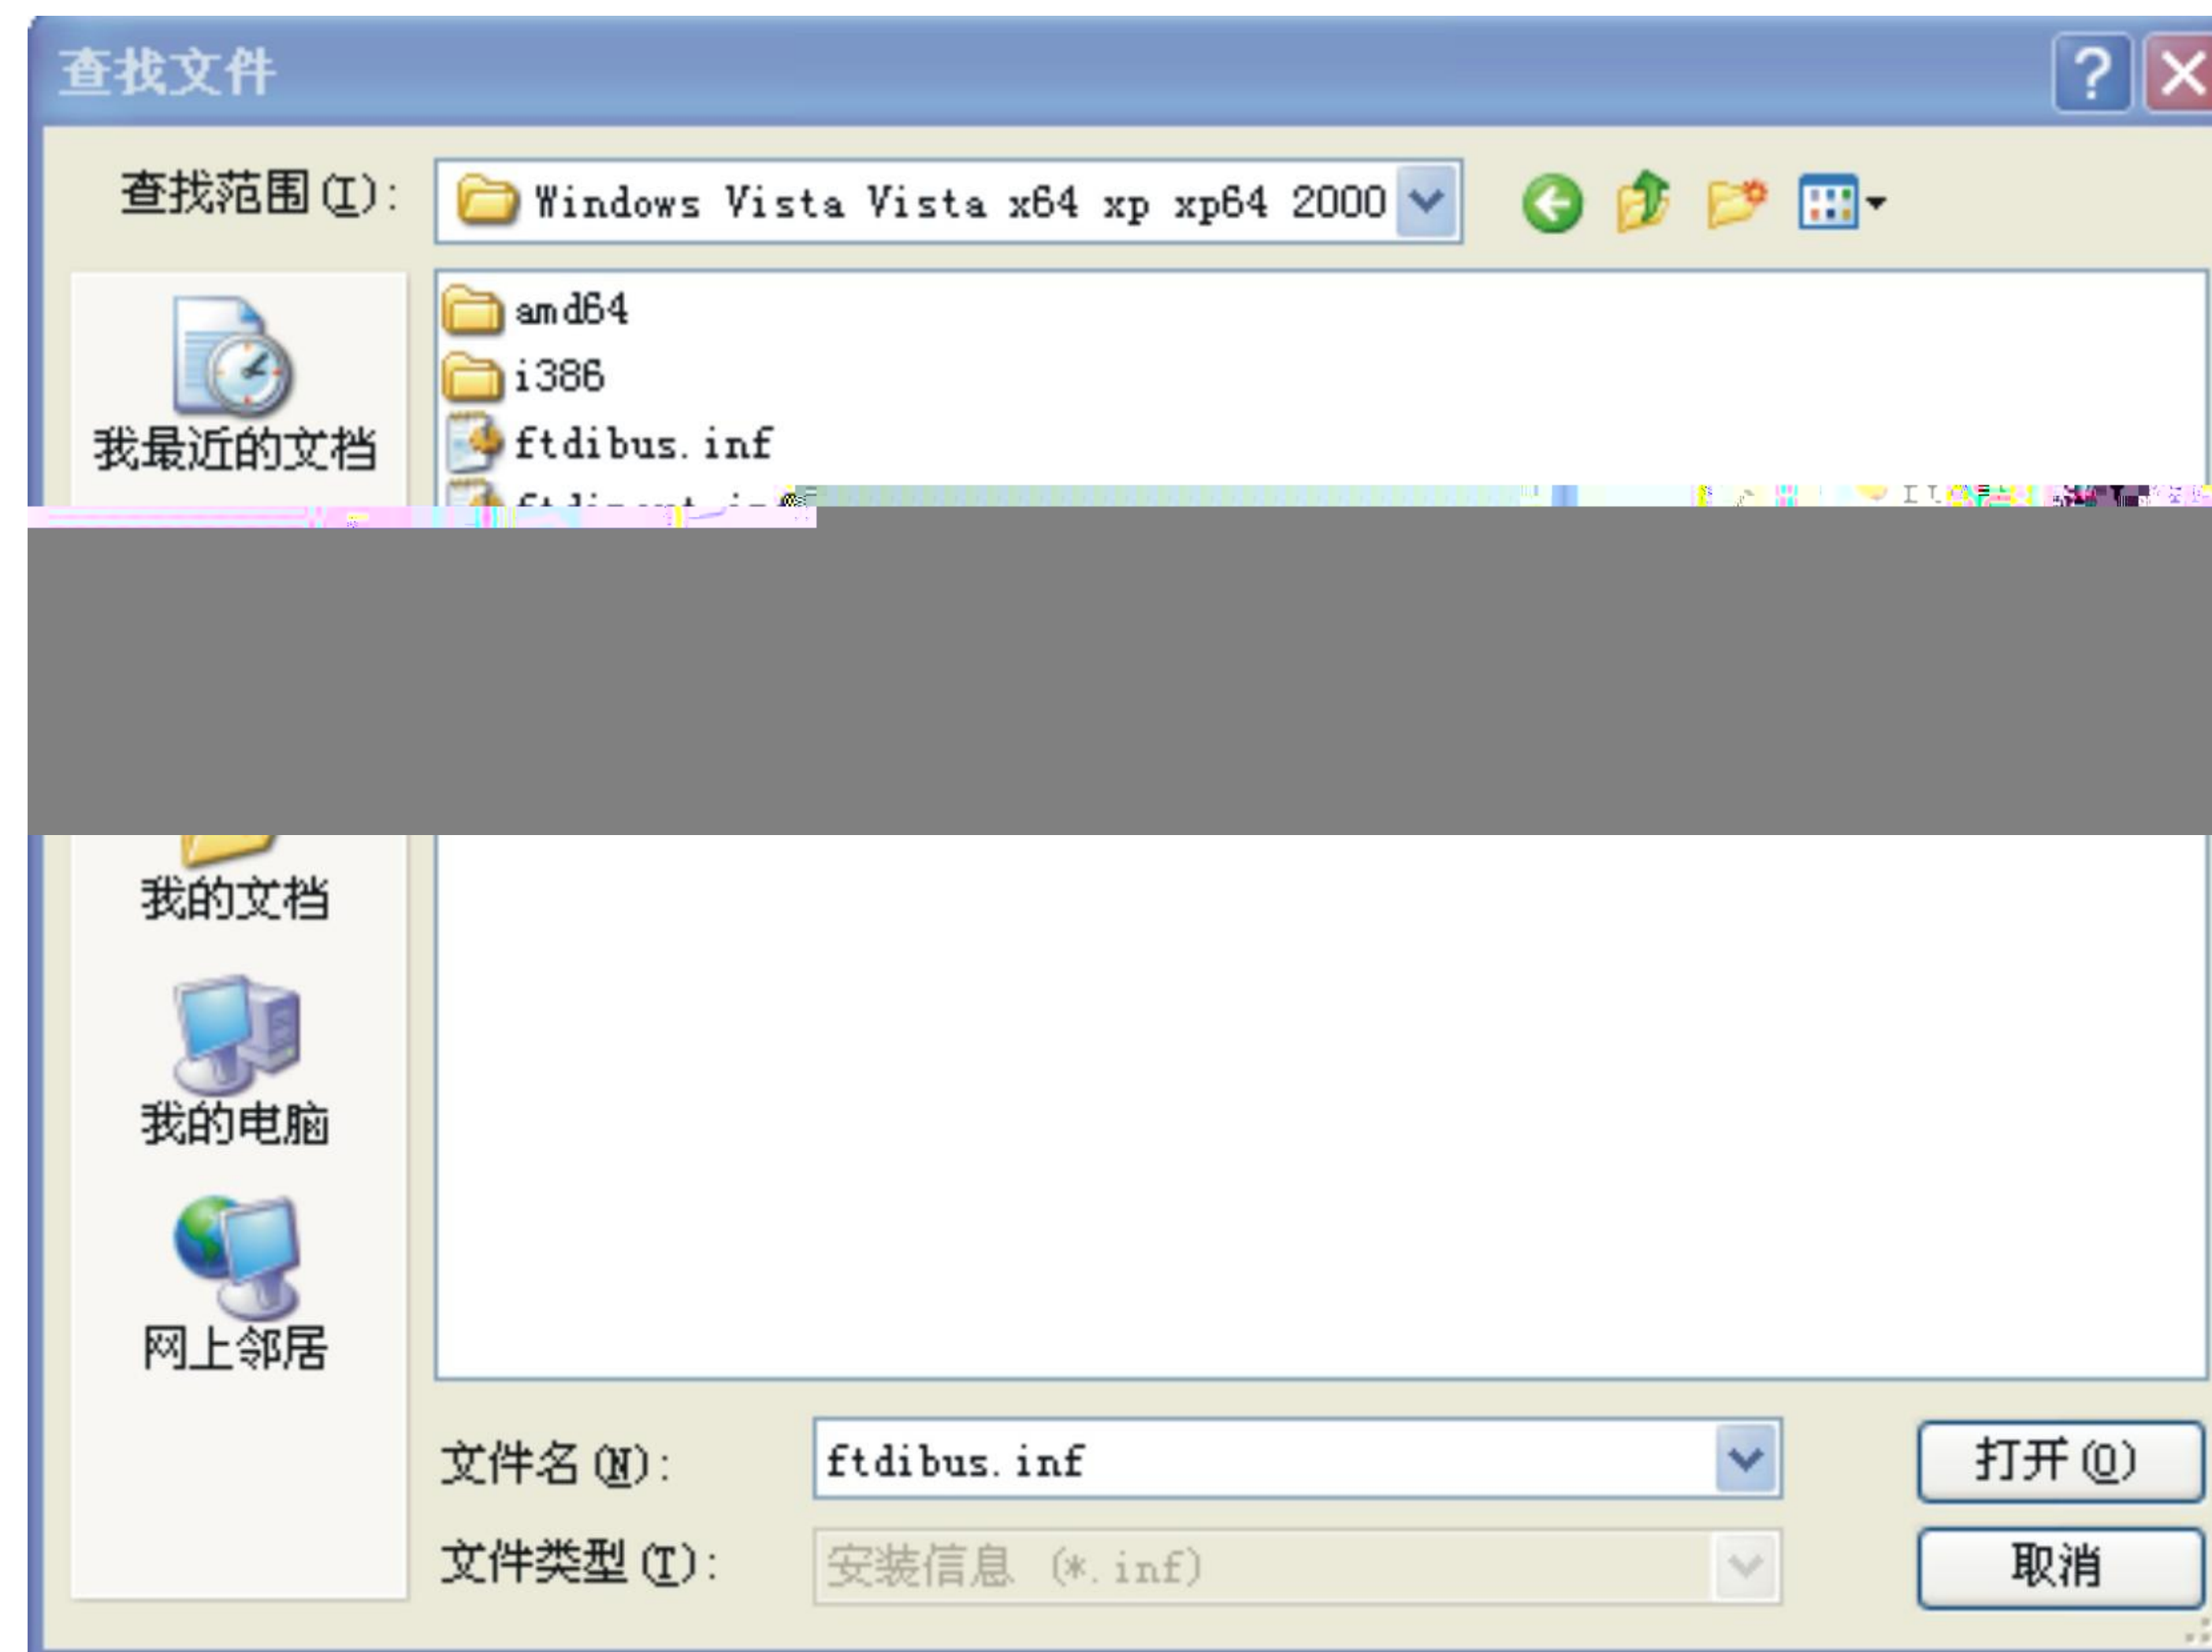

()

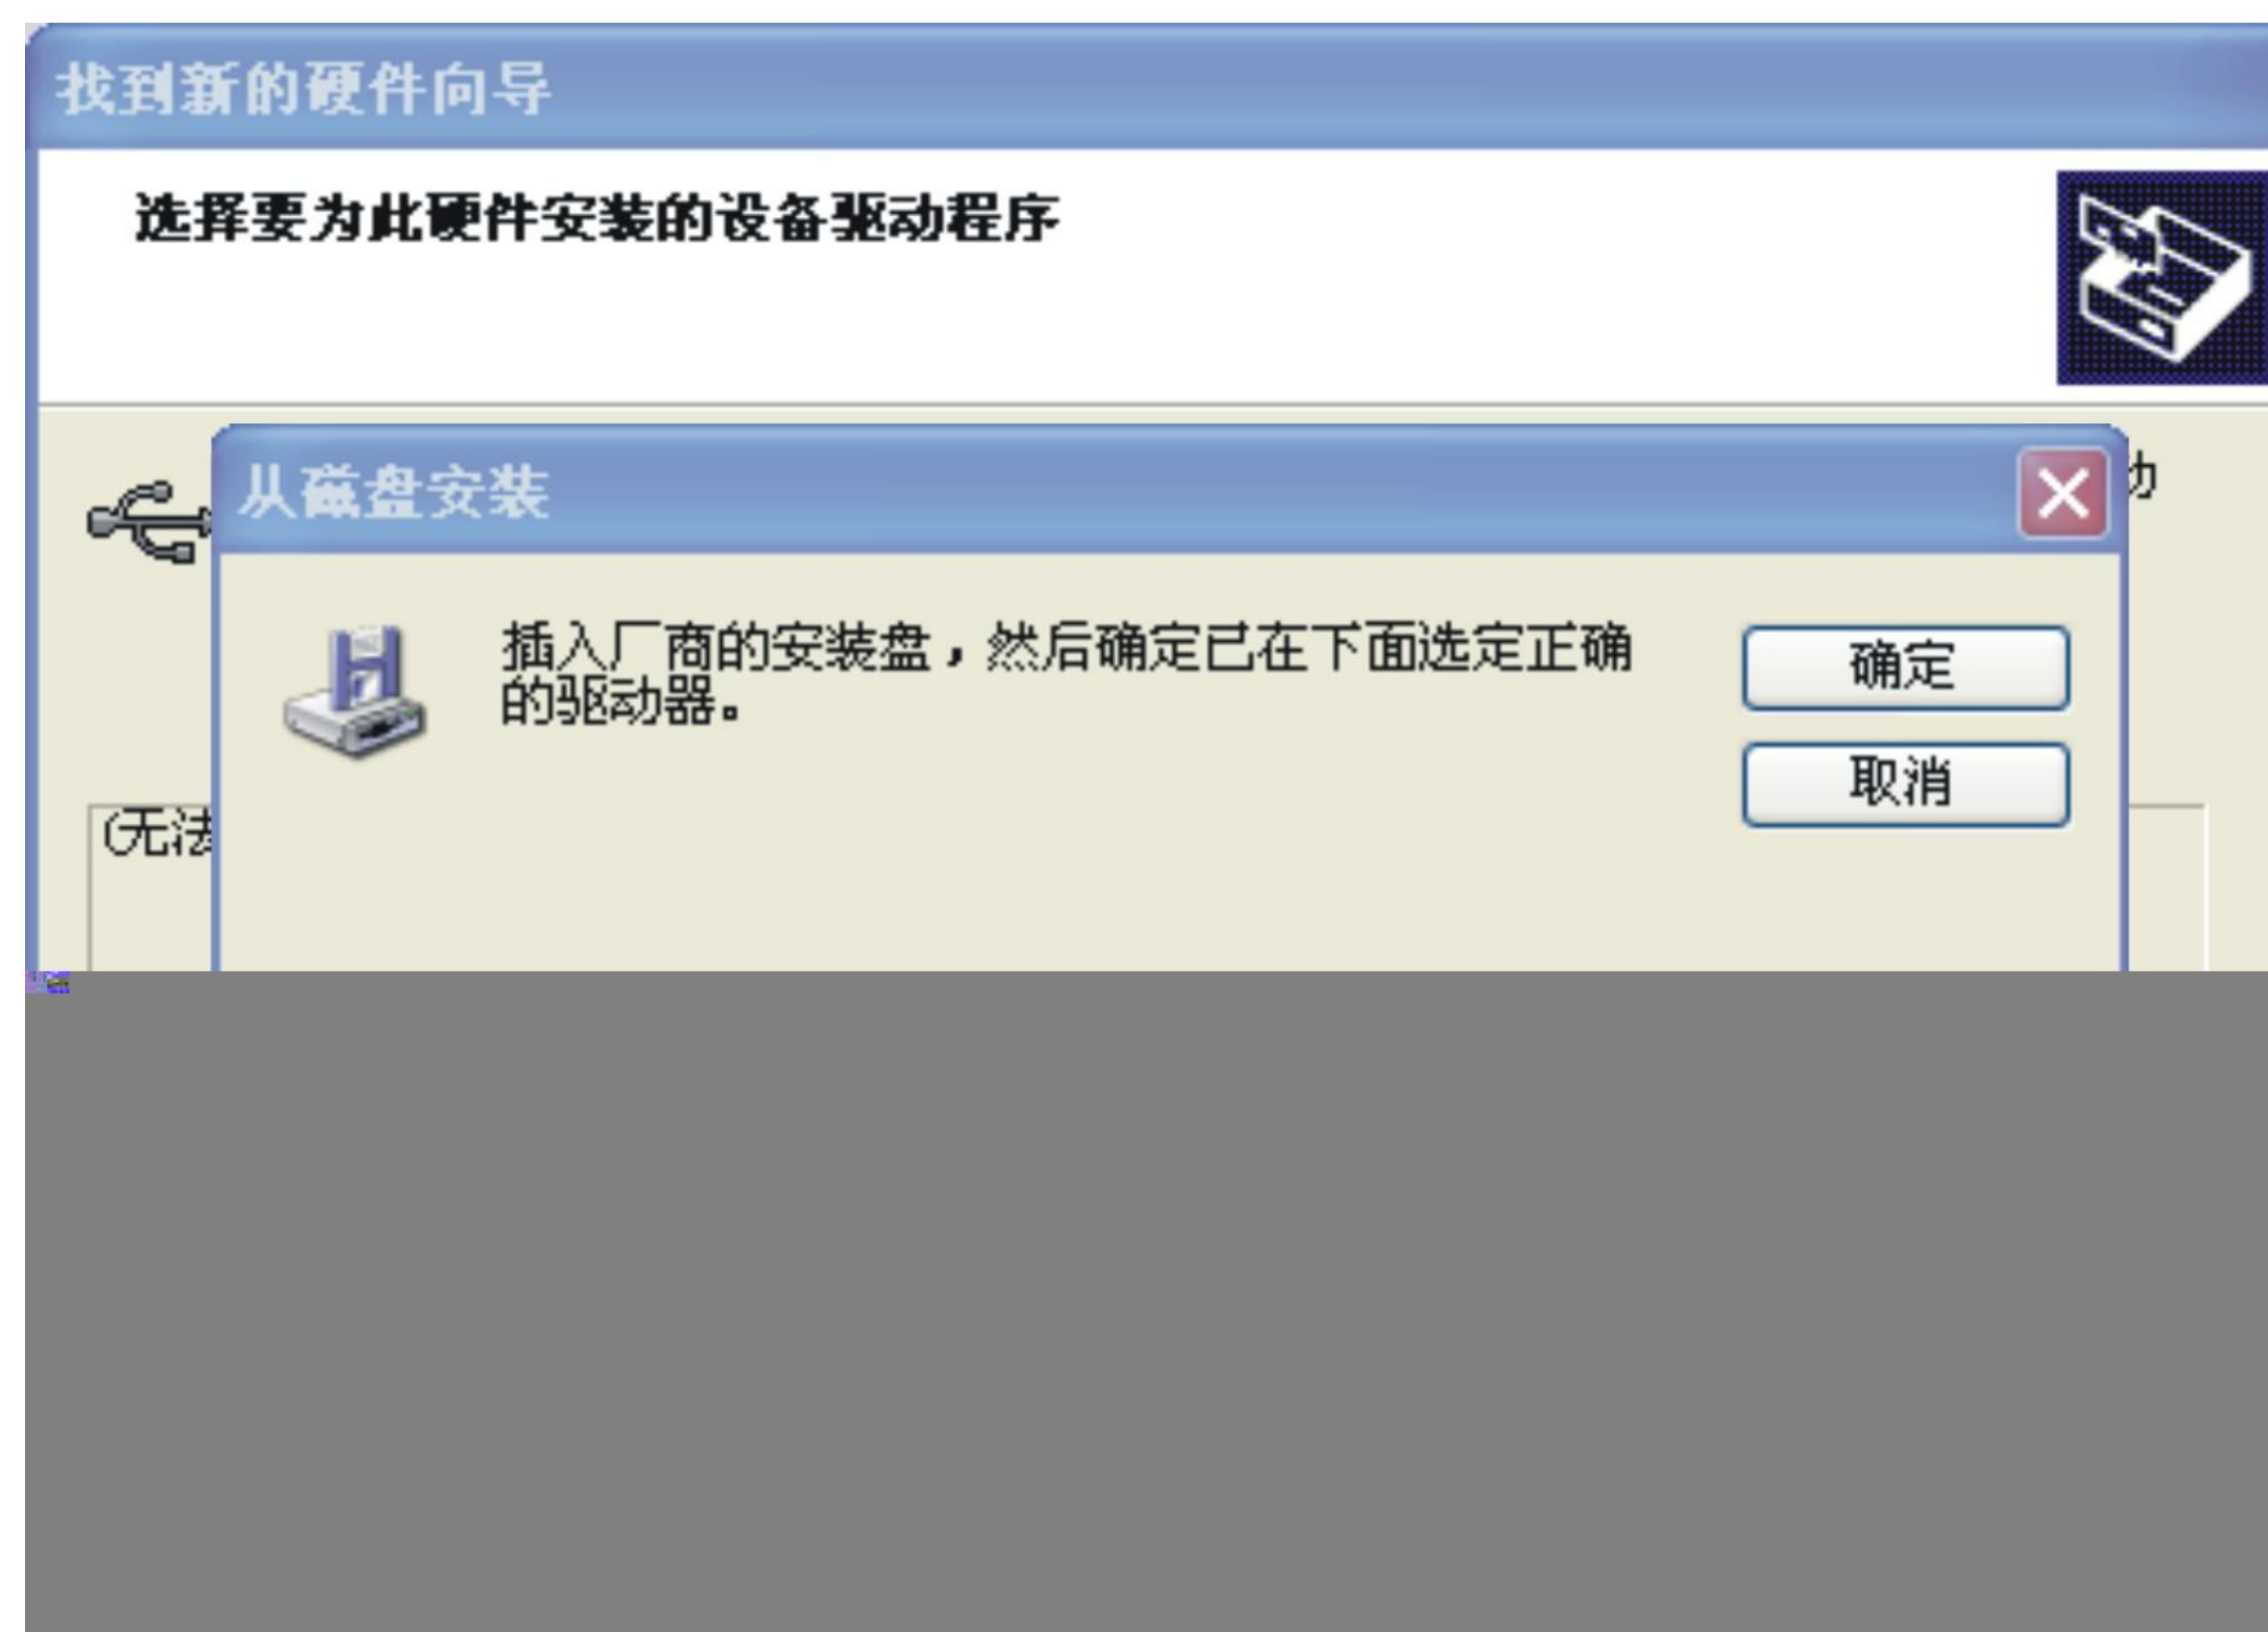 


USB Serial Converter



USB Serial Converter ,

 USB Serial Prot

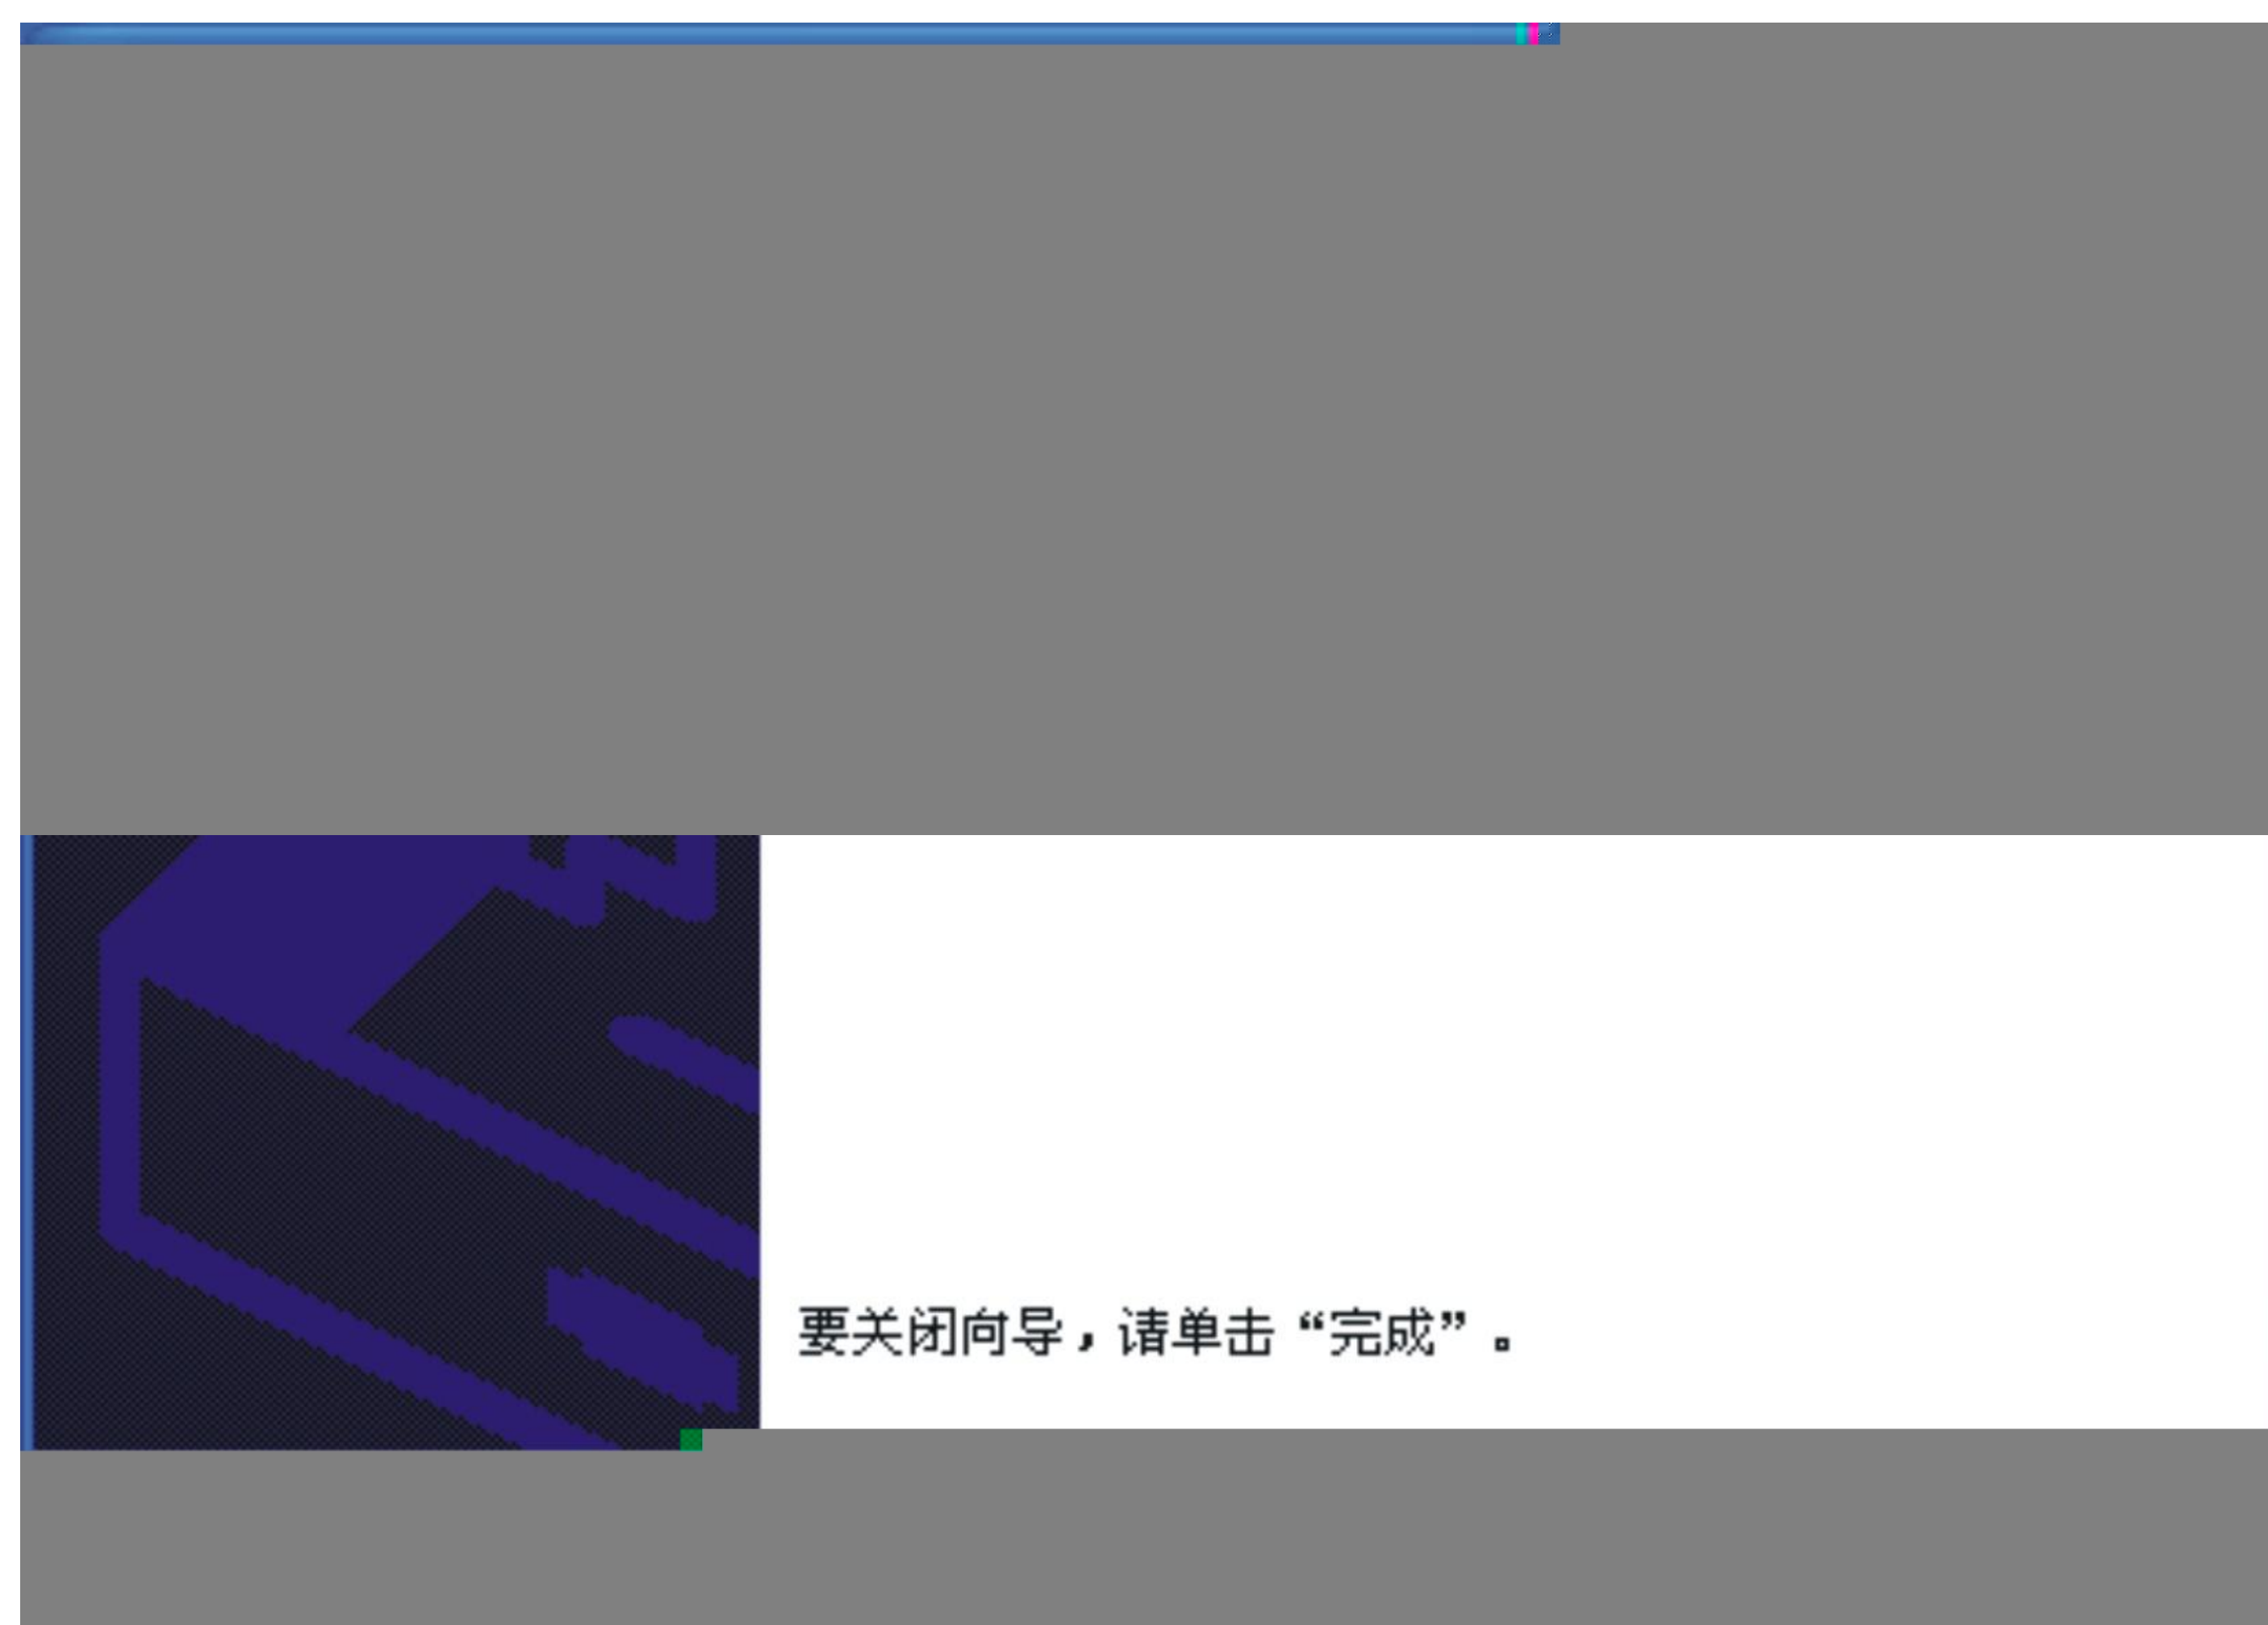

USB Serial Port

 
,

USB Serial

Converter



USB Serial Port

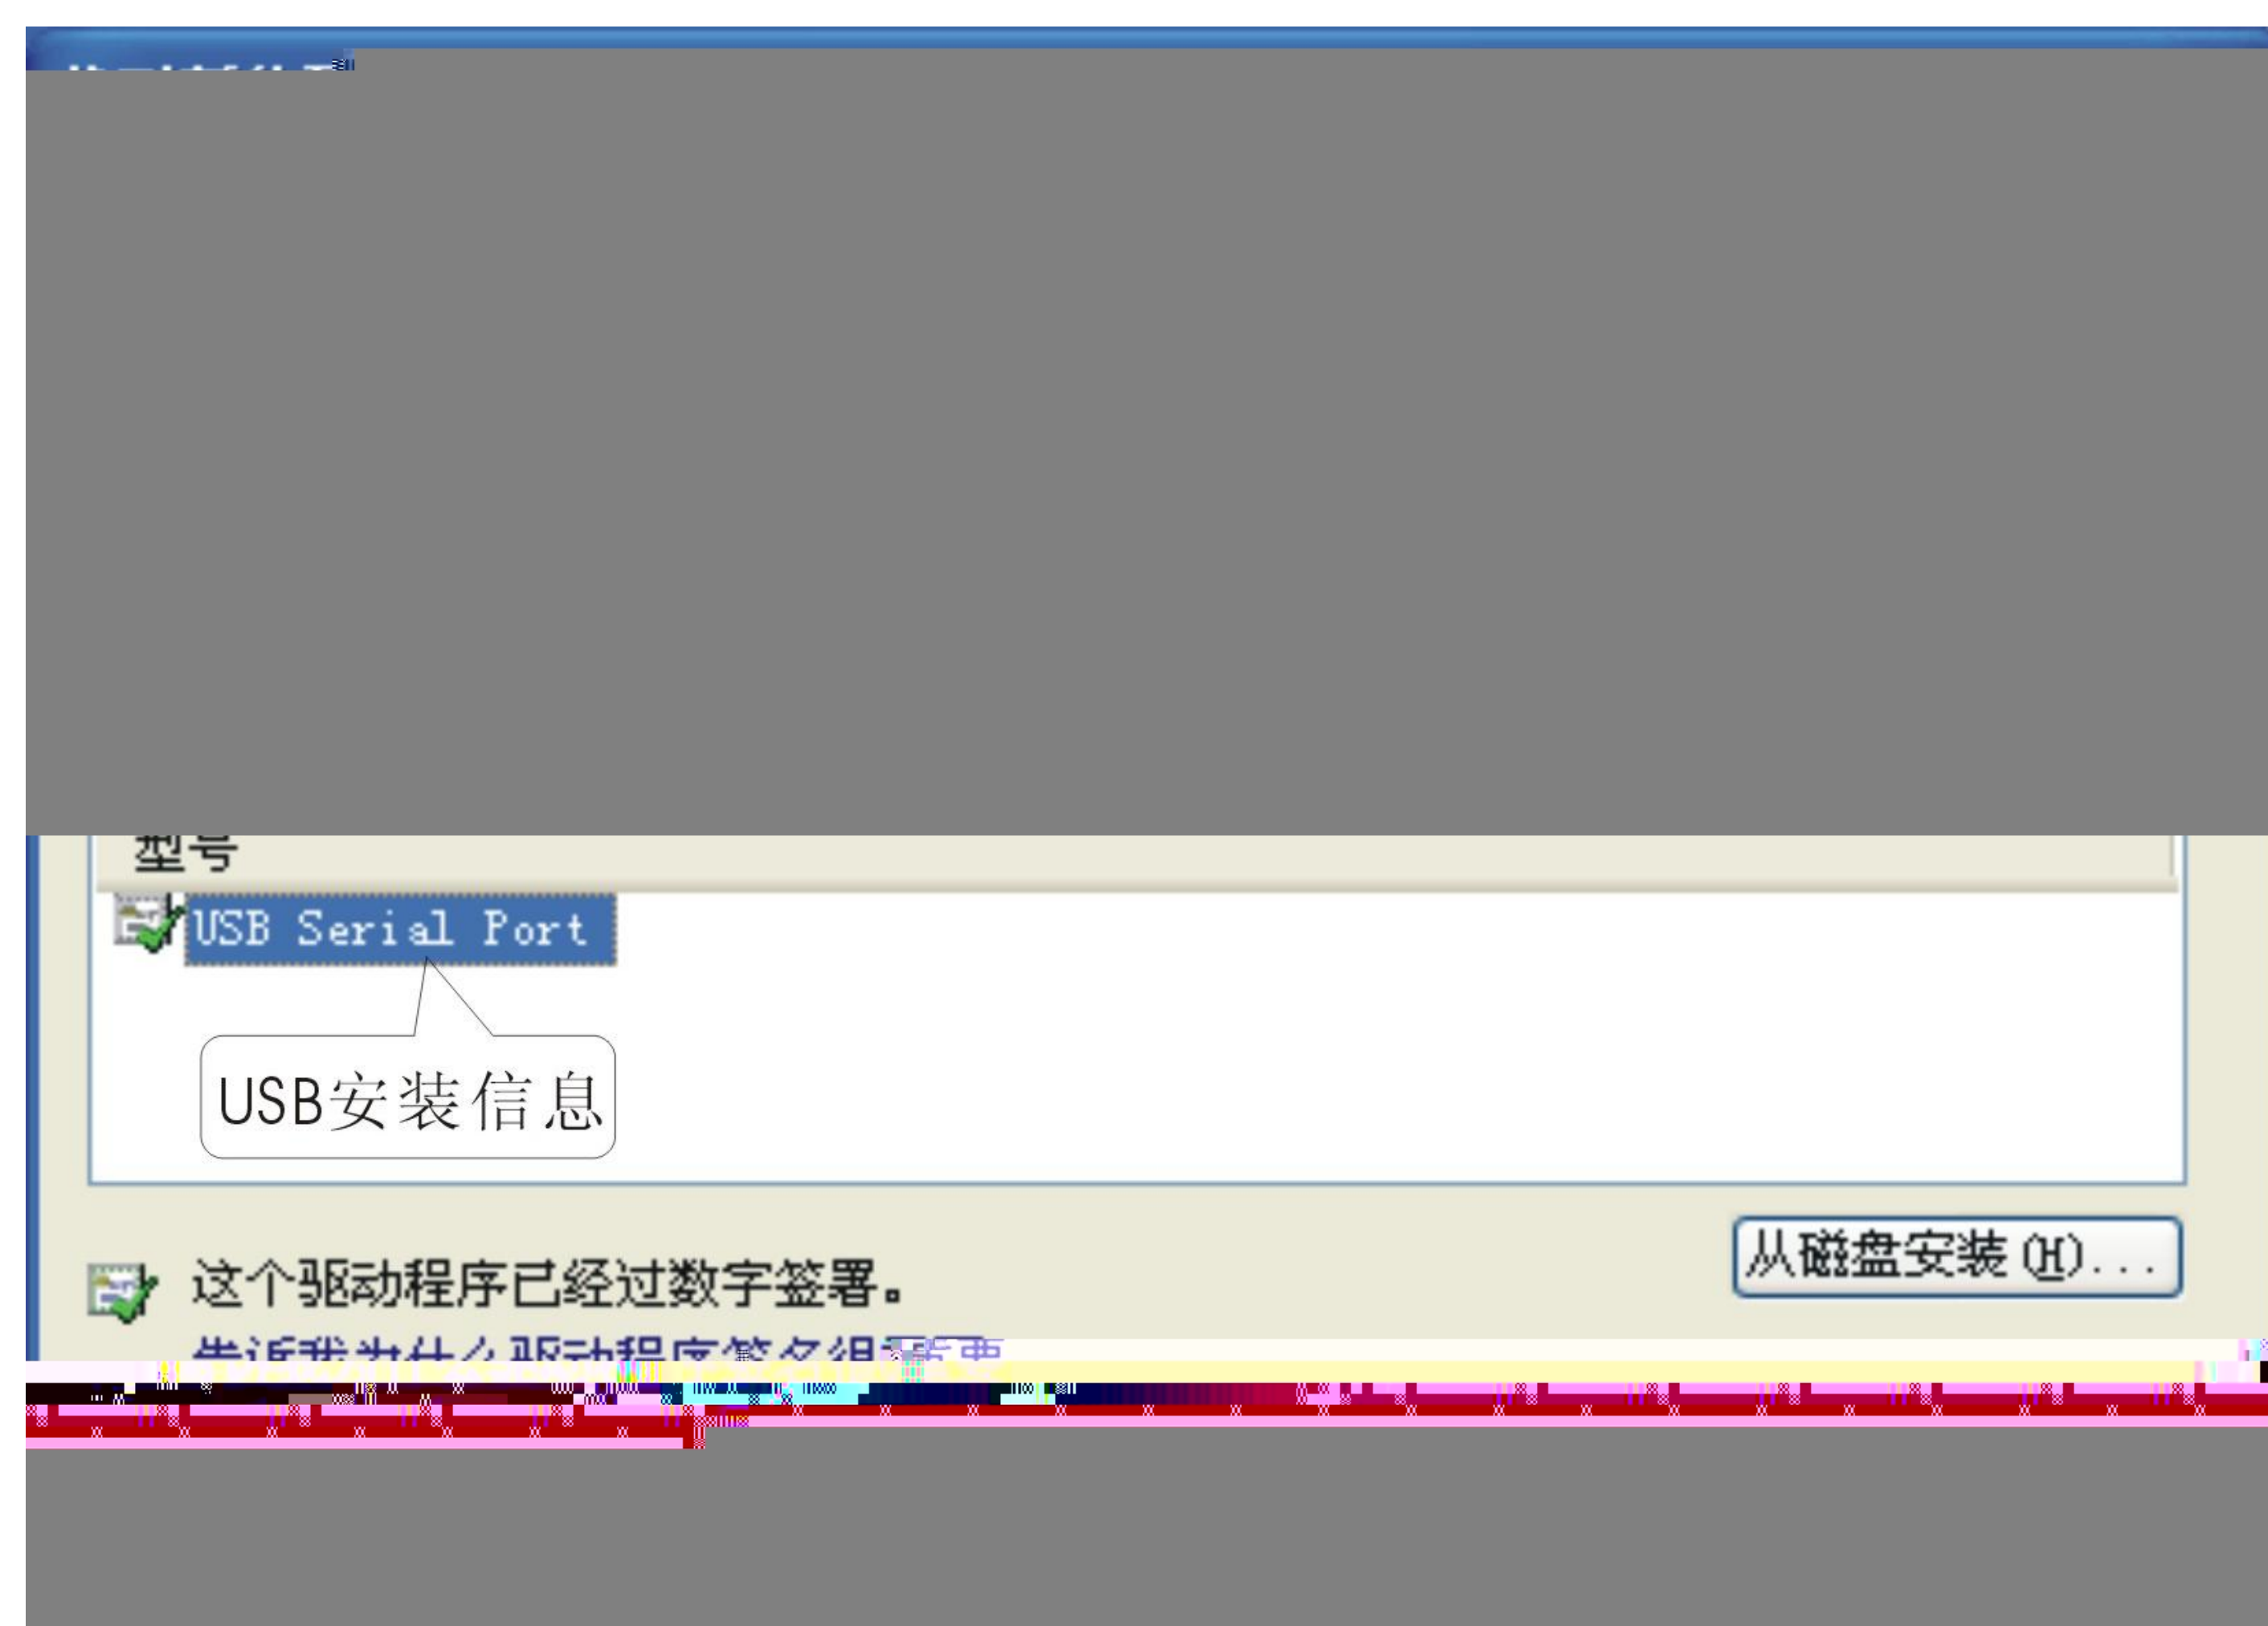

USB Serial Port

,

XM-3089



USB

COM

COM3

COM

,

UT-883

